

SAMSUNG

DVD-C450K
DVD-C450
DVD-C360
DVD-C350K
DVD-C350

คู่มือการใช้งาน คู่มือผู้ใช้

จินตนาการถึงความเป็นไปได้

ขอบคุณที่ท่านเลือกซื้อผลิตภัณฑ์ Samsung นี้
หากต้องการขอรับบริการที่สมบูรณ์
โปรดลงทะเบียนผลิตภัณฑ์ของท่านที่
www.samsung.com/global/register



AK68-01920A



ไทย

ข้อควรระวังเบื้องต้น

1. การติดตั้ง

- ให้ดูฉลากกำกับที่ด้านหลังของเครื่องเล่น เพื่อดูแรงดันไฟฟ้าที่เหมาะสมในการใช้งาน
- ติดตั้งเครื่องเล่นของคุณบนพื้นผิวที่มีรูระบายอากาศเพียงพอ (7-10 ซม.) อย่าให้มีสิ่งใดปิดกั้นรูระบายอากาศบนชิ้นส่วนต่างๆ ของเครื่อง เพื่อไม่ให้อากาศที่เย็นของพัดลมระบายอากาศ
- อย่าใช้มือกดถาดวางแผ่น
- อย่าวางอุปกรณ์ต่างๆ ขอบกัน
- ให้แน่ใจว่าปิดอุปกรณ์ทั้งหมด ก่อนที่จะขนย้ายเครื่อง
- ก่อนที่จะเชื่อมต่ออุปกรณ์อื่นๆ เข้ากับเครื่องเล่นนี้ ให้แน่ใจว่าปิดอุปกรณ์เหล่านั้นแล้ว
- ให้แน่ใจว่านำแผ่นออก และปิดเครื่องเล่นหลังจากใช้งาน โดยเฉพาะอย่างยิ่ง เมื่อคุณจะไม่ใช้เครื่องเล่นเป็นเวลานาน
- ปลั๊กสายไฟหลักสำหรับติดตั้งเครื่องต่ออุปกรณ์และวางอยู่ในสถานะพร้อมใช้งานทุกครั้ง

2. เพื่อความปลอดภัยของคุณ

- ผลิตภัณฑ์ที่มีการใช้แสงเลเซอร์ การใช้ตัวควบคุมการปรับแต่ง หรือกระบวนการใดๆ ที่นอกเหนือจากที่ระบุในที่นี้ อาจเป็นผลให้มีการสัมผัสกับรังสีที่อันตราย
- อย่าเปิดฝาปิดเครื่อง และอย่าซ่อมแซมผลิตภัณฑ์ด้วยตัวเอง ไม่ให้นำไปข้างที่มีประสบการณ์ซ่อมแซม

3. ข้อควรระวัง

- เครื่องเล่นของคุณไม่ได้ออกแบบมาสำหรับใช้ในเชิงอุตสาหกรรม แต่ออกแบบมาสำหรับใช้ภายในบ้าน ใช้ผลิตภัณฑ์ที่คล้ายกัน
- **อุปกรณ์ต้องไม่สัมผัสกับน้ำ หยดน้ำ น้ำที่หก หรือความชื้น** และ**อย่าทำความสะอาดเครื่องเล่นด้วยน้ำ**
- สภาพแวดล้อมภายนอก เช่น ฟ้าผ่า และประจุไฟฟ้าสถิตย์สามารถมีผลกระทบต่อการทำงานปกติของเครื่องเล่นได้ ถ้าเกิดเหตุการณ์เช่นนี้ขึ้น ให้ปิดเครื่องเล่นและเปิดหน้าต่างให้อากาศถ่ายเทโดยเปิด POWER หรือช่องปลั๊กออก จากนั้นเสียบสายไฟ AC เข้ากับเต้าเสียบไฟ AC ใหม่ เครื่องเล่นจะทำงานได้ตามปกติ

- เมื่อเกิดการกลั่นตัวขึ้นภายในเครื่องเล่นเนื่องจากมีการเปลี่ยนแปลงอุณหภูมิฉับพลัน เครื่องเล่นอาจทำงานได้ไม่ถูกต้อง ถ้าเกิดเหตุการณ์เช่นนี้ขึ้น ให้ปล่อยเครื่องเล่นไว้ที่อุณหภูมิห้อง จนกระทั่งภายในเครื่องเล่นแห้ง และทำงานได้ตามปกติ

4. แผ่นดิสก์

- อย่าทำความสะอาดแผ่นดิสก์โดยใช้สิ่งเปรี้ยว ความสะอาด เบนซิน อินเนอร์ หรือสารละลายใดๆ อาจทำให้พื้นผิวของแผ่นดิสก์เสียหายได้
- อย่าสัมผัสพื้นผิวบนแผ่นดิสก์ ให้จับที่ขอบทั้งสองด้าน หรือขอบด้านใดด้านหนึ่งและอยู่ตรงกลาง
- เช็ดสิ่งสกปรกออกเบาๆ อย่าใช้ผ้าถูบนแผ่นดิสก์ไปมา

5. ข้อมูลด้านสภาพแวดล้อม

- แบตเตอรี่ที่ใช้ภายในผลิตภัณฑ์นี้ ประกอบด้วยสารเคมีที่เป็นอันตรายต่อสิ่งแวดล้อม
- ดังนั้น ให้ทิ้งแบตเตอรี่อย่างเหมาะสม ตามกฎข้อบังคับในท้องถิ่น หรือกฎของประเทศ

ผลิตภัณฑ์พร้อมกับคู่มือผู้ใช้ ได้รับอนุญาตภายใต้สิทธิที่เป็นทรัพย์สินทางปัญญาของบริษัทของพวกเรา โดยอนุญาตให้จำกัดอยู่เพียงการใช้ที่ไม่เป็นเชิงพาณิชย์โดยผู้บริโภคเป็นผู้ใช้สำหรับชมภาพยนตร์ดิจิทัล ไม่มีการให้สิทธิในการใช้งานเชิงพาณิชย์ โดยอนุญาตให้ครอบคลุมถึงผลิตภัณฑ์อื่นที่นอกเหนือจากผลิตภัณฑ์นี้ และใบอนุญาตไม่ขยายไปยังผลิตภัณฑ์ที่ไม่ได้รับอนุญาต หรือกระบวนการต่างๆ ที่สอดคล้องกับ ISO/OUR 11172-3 หรือ ISO/OUR 13818-3 ที่ชี้หรือที่จำหน่ายพร้อมกับผลิตภัณฑ์นี้ โดยอนุญาตให้ครอบคลุมเฉพาะการใช้งานผลิตภัณฑ์นี้ในการเข้ารหัส และ/หรือถอดรหัสไฟล์เสียงที่สอดคล้องกับมาตรฐาน ISO/OUR 11172-3 หรือ ISO/OUR 13818-3 ภายใต้ใบอนุญาตนี้ ไม่มีการให้สิทธิสำหรับคุณสมบัติหรือฟังก์ชันของผลิตภัณฑ์ที่ไม่สอดคล้องกับมาตรฐาน ISO/OUR 11172-3 หรือ ISO/OUR 13818-3

ข้อควรระวัง: การใช้ตัวควบคุม การปรับ หรือขั้นตอนใดๆ ที่นอกเหนือจากที่ระบุในที่นี้ อาจทำให้มีการสัมผัสถูกการแผ่รังสีที่เป็นอันตราย

การบัญชี

ข้อควรระวังเบื้องต้น	2	CD เพลง	7
การตั้งค่า		การเลือกไฟล์เตอร์	7
คุณสมบัติทั่วไป	2	การเลือก MP3/WMA/CD เพลง	7
คู่มือขยาย	3	เล่นไฟล์ MPEG4	8
ส่วนต่างๆ ของรีโมทคอนโทรล	4	การเลือกไฟล์โดยใช้คุณสมบัติ USB Host (เฉพาะซีดีเพลง DVD-C450K, C450, C360)	9
การเชื่อมต่อ		การติดตั้งฮาร์ดดิสก์ (เฉพาะซีดีเพลง DVD-C450K, C450, C360)	9
การเลือกการเชื่อมต่อ	4	การเลือก CD ภาพ	9
การตั้งค่าพื้นฐาน		ฟังก์ชัน คคราโอเกะ	9
การเล่นแผ่นดิสก์	5	ฟังก์ชัน คคราโอเกะ (เฉพาะซีดีเพลง DVD-C450K, C350K)	10
การใช้ Search และ Skip	5	การเปลี่ยนเมนูการตั้งค่า	10
การใช้ฟังก์ชัน Function	5	การใช้เมนูการตั้งค่า	10
การใช้เมนู Disc และ Title Menu	6	การตั้งค่าคุณสมบัติของภาษา	10
เล่นซ้ำ	6	การตั้งค่าตัวเลือกเสียง	11
ฟังก์ชันซ้ำ	6	การตั้งค่าตัวเลือกการแสดงผล	11
ฟังก์ชันขั้นสูง		การตั้งค่าควบคุมโดยหยกปรอง	11
การปรับอัตราส่วนภาพ (มุมมองEZ)	6	การตั้งค่า DivX	11
การเลือกภาษาของเสียงพากย์	6	ข้อมูลอ้างอิง	12
การเลือกภาษาของคำบรรยาย	7	การแก้ไขปัญหา	12
การเปลี่ยนมุมมอง	7	ข้อมูลจำเพาะ	12
การใช้ฟังก์ชัน Bookmark	7		
การใช้ฟังก์ชัน Zoom	7		
คลิกเมนู ำหรับ MP3/WMA/JPEG/			

การตั้งค่า

คุณสมบัติทั่วไป

เสียงที่เยี่ยมยอด
ด้วยระบบลดเสียงรบกวน ซึ่งเป็นเทคโนโลยีที่ได้รับการพัฒนาโดย Dolby Laboratories จะผลิตเสียงที่ไพเราะแก่ความรู้สึก

หน้าจอ

คุณภาพการรับชมได้เต็มมุมมองแบบธรรมชาติ และแบบไวท์ กรีน (16:9)

สโรว์ในขั้นคุณ

มาลองเล่นจากที่มีควมสำคัญในความเร็วที่ช้าลงได้

ควบคุมโดยหยกปรอง (DVD)

การควบคุมโดยหยกปรอง ช่วยให้ผู้ใช้สามารถตั้งค่าระดับที่จำเป็นเพื่อป้องกันผู้เยาว์ภาพยนตร์ที่อาจเป็นอันตราย เช่น ภาพยนตร์ที่มีความรุนแรง ภาพยนตร์ที่มีฉากไม่เหมาะสม เป็นต้น

ฟังก์ชันต่างๆ ของเมนูบนหน้าจอ

คุณสามารถเลือกภาษาต่างๆ (เสียงพากย์/คำบรรยาย) และมุมมองหน้าจอในขณะที่กำลังรับชมภาพยนตร์ได้

โปรแกรมซอฟต์แวร์

โปรแกรมซอฟต์แวร์ จะสร้างภาพที่มีคุณภาพดีขึ้น โดยเพิ่มเส้น แกนของภาพอินเตอร์เฟซแบบดั้งเดิมขึ้นเป็น 2 เท่า

มุมมอง EZ (DVD)

มุมมองแบบง่าย ใช้ในการปรับภาพให้เหมาะสมกับขนาดหน้าจอของโทรทัศน์ของคุณ (16:9 หรือ 4:3)

การถ่ายภาพด้วยดิจิทัล (JPEG)

คุณสามารถถ่ายภาพด้วยดิจิทัลบนหน้าจอโทรทัศน์ของคุณได้

เล่นซ้ำ

คุณสามารถเล่นเพลงหรือภาพยนตร์ซ้ำ โดยการกดปุ่ม REPEAT

MP3/WMA

เครื่องเล่นนี้สามารถเล่นแผ่นดิสก์ที่ประกอบด้วยไฟล์ MP3/WMA ได้

MPEG

เครื่องเล่นนี้สามารถเล่นไฟล์รูปแบบ MPEG4 ภายในไฟล์ avi ได้

การตั้งค่าข้อมูลซีดี

(เฉพาะซีดีเพลง DVD-DVD-C450K, C450, C360)

คุณสมบัตินี้ช่วยให้คุณสามารถคัดลอกไฟล์เสียงจากดิสก์ไปยังอุปกรณ์ USB เป็นรูปแบบ MP3 ได้ (เฉพาะซีดีเพลง (CD DA))

หมายเหตุ

- แผ่นดิสก์เหล่านี้ไม่สามารถเล่นกับเครื่องเล่นนี้ได้
- DVD-ROM • DVD-RAM
- CD-ROM • CDV
- CDI • CVD
- CDGs เล่นแต่เสียงเท่านั้น ไม่เล่นภาพ
- ความสามารถในการเล่น ขึ้นอยู่กับสภาพในการเล่น
- DVD-R, +R
- CD-RW
- DVD+RW, -RW (โหมด V)
- เครื่องเล่นนี้ ไม่สามารถเล่นแผ่น CD-R, CD-RW และ DVD-R บางแผ่นได้เนื่องจากชนิดของ แผ่นดิสก์หรือสภาพในการเล่นบันทึก

การป้องกันการค้าลอก

แผ่น DVD ส่วนมากมีการเข้ารหัสเพื่อป้องกันการคัดลอกไว้ด้วยเหตุนี้ คุณควรเชื่อมต่อเครื่องเล่น DVD ของคุณเข้ากับโทรทัศน์โดยตรง โดยไม่ผ่าน VCR (เครื่องเล่นวิดีโอ) การเชื่อมต่อไปยัง VCR เป็นผลให้ภาพผิดเพี้ยนเนื่องจากแผ่น DVD ที่มีการป้องกันการคัดลอก

เครื่องหมายบนแผ่นดิสก์

	หมายเลขภูมิภาคในการเล่น
	ระบบภาพแบบ PAL ในสหราชอาณาจักร, ฝรั่งเศส, เยอรมัน, ฯลฯ
	แผ่นดิสก์ที่รองรับดิจิตอล
	แผ่นดิสก์สเตอริโอ
	แผ่นดิสก์เสียงแบบดิจิตอล
	แผ่นดิสก์ DTS
	แผ่นดิสก์ MP3

ผลิตภัณฑ์รวมเอาเทคโนโลยีการป้องกันล่าสุดซึ่งได้รับความคุ้มครองโดยสิทธิบัตร หรือและสิทธิบัตรทรัพย์สินทางปัญญาของบริษัท Rovi Corporation และเจ้าของสิทธิ์อื่นๆ การใช้เทคโนโลยีการป้องกันลิขสิทธิ์นี้ ต้องได้รับการอนุญาตจาก Rovi Corporation และมีวัตถุประสงค์สำหรับการชมในร้านและในสถานที่จำกัดเท่านั้น ถ้าไม่ได้รับอนุญาตเป็นอย่างอื่นจาก Rovi Corporation ห้ามดำเนินการทางวิศวกรรมย้อนกลับหรือถอดชิ้นส่วนผลิตภัณฑ์

สัญญาณออกระบบโปรเกรสซีฟสแกน (576p)

"ผู้บริโภคควรทราบว่า โทรทัศน์ความคมชัดสูงทุกเครื่องไม่ได้เข้ากันได้กับผลิตภัณฑ์ และอาจเกิดปัญหาในการแสดงภาพ ในกรณีที่เกิดปัญหาเกี่ยวกับภาพในระบบโปรเกรสซีฟสแกนกับเครื่องรุ่น 576 เราแนะนำให้ผู้ใช้สลับการเชื่อมต่อไปเป็นสัญญาณออกในระบบ 'ความคมชัดมาตรฐาน' หากมีคำถามเกี่ยวกับเครื่องรับโทรทัศน์นี้ นู่น กรุณาติดต่อศูนย์บริการลูกค้าของซัมซุง"

หมายเลขภูมิภาค

ทั้งเครื่องเล่น DVD และแผ่นดิสก์ ถูกเข้ารหัสไว้ตามภูมิภาค เพื่อที่จะสามารถเล่นแผ่นดิสก์ได้ รหัสภูมิภาคเหล่านี้ต้องตรงกัน ถ้ารหัสไม่ตรงกัน แผ่นดิสก์ก็จะเล่นไม่ได้

มีการอธิบายหมายเลขภูมิภาคสำหรับเครื่องเล่นนี้ไว้ที่แผงด้านหลังของเครื่องเล่น

การรับรอง DivX

 


DivX, DivX Certified และโลโก้ที่เกี่ยวข้อง เป็นเครื่องหมายการค้าของ DivX Networks, Inc และมีการใช้โดยได้รับอนุญาต ผ่านการรับรอง DivX เพื่อเล่นวิดีโอ


คำอธิบาย

ตัวควบคุม ที่แผงด้านหน้า


DVD-C450K

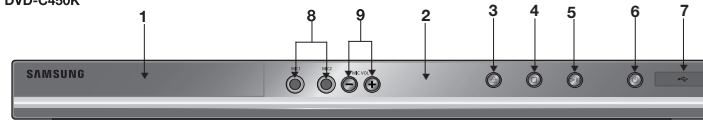


DVD-C450

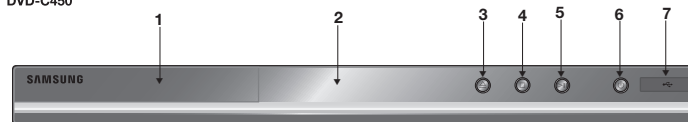 


DVD-C360

 

DVD-C350K

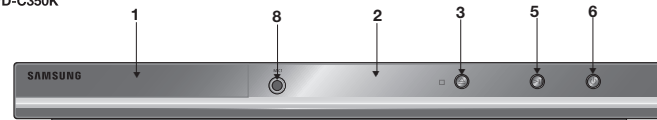 

DVD-C350

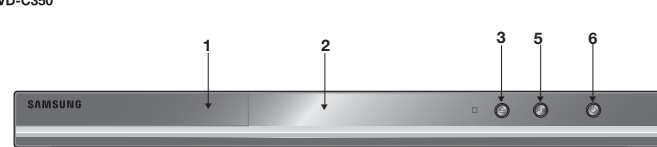 

1. ถาดวางแผ่นดิสก์

วางแผ่นดิสก์ที่น.

2. DISPLAY

ตัวแสดงสถานะการทำงานจะแสดงที่น.

3. OPEN/CLOSE/STOP (▲)

กดเพื่อ เปิดและปิดถาดวางแผ่นดิสก์.

4. STOP (■)

(เฉพาะซีดีเพลง DVD-C450K,C450)

หยุดการเล่นแผ่นดิสก์.

5. PLAY/PAUSE (▶|▶)

เริ่มหรือหยุดการเล่นแผ่นดิสก์ชั่วคราว.

6. POWER ON/OFF (Ⓢ)

เปิด/ปิดเพื่อเปิด/ปิดเครื่องเล่น.

7. USB HOST

(เฉพาะซีดีเพลง DVD-C450K,C450,C360)

ต่อกล้องถ่ายภาพดิจิทัล, เครื่องเล่น MP3, เมมโมรีสติค, ตัวอ่านการ์ด หรืออุปกรณ์. สื่อเก็บข้อมูลที่สามารถถอดออกได้อื่นๆ.

8. MIC 1/2

(เฉพาะซีดีเพลง DVD-C450K,C350K)

 
เชื่อมต่อไมโครโฟนสำหรับฟังก์ชันคาราโอเกะ.

9. ระดับเสียงไมโครโฟน

(เฉพาะซีดีเพลง DVD-C450K)

ใช้เพื่อปรับระดับเสียงของไมโครโฟน เมื่อต้องการใช้ปุ่มไทด์คเข้าไป หมุนไปทางซ้ายหรือขวาเพื่อควบคุมระดับเสียง.

ส่วนต่าง ๆ ของรีโมทคอนโทรล

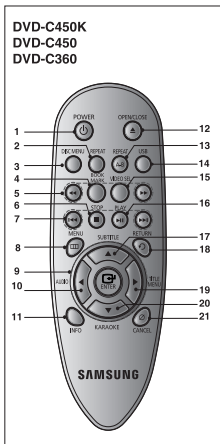

1. ปุ่ม POWER ของ DVD

เปิดหรือปิดเครื่องเล่น

2. ปุ่ม REPEAT

ใช้ในการเล่นซ้ำเรื่อง บท แทรก หรือทั้งแผ่น

3. ปุ่ม DISC MENU

เรียกเมนูของแผ่นดิสก์ ขึ้นมา

4. ปุ่ม BOOKMARK

กดเพื่อเปลี่ยนโหนดวิดีโอออก

5. ปุ่ม SEARCH (◀|▶)

ใช้ในการค้นหาไปยังหน้า/ ถอยหลังภายในแผ่นดิสก์

6. ปุ่ม STOP (■)

ใช้เพื่อข้ามเรื่อง บท หรือแทรก

7. ปุ่ม SKIP (◀|▶)

ใช้เพื่อข้ามเรื่อง บท หรือแทรก

8. ปุ่ม MENU

เรียกเมนูของเครื่องเล่น DVD ขึ้นมา

9. ปุ่ม ENTER/▲/▼/◀/▶

ปุ่มนี้ทำงานเหมือนเป็นสวิตช์เปลี่ยนหน้าที่ไปเรื่อยๆ

10. ปุ่ม AUDIO (◀)

ใช้ปุ่มนี้เพื่อเข้าไปยังฟังก์ชันเสียงต่างๆ ที่มีบนแผ่นดิสก์

11. ปุ่ม INFO

แสดงโหนดของแผ่นดิสก์ปัจจุบัน

12. ปุ่ม OPEN/CLOSE (▲)

เพื่อเปิดและปิดถาดวางแผ่นดิสก์

13. ปุ่ม REPEAT A-B

ปุ่ม USB

14. ปุ่ม USB

ปุ่ม VIDEO SEL.

15. ปุ่ม VIDEO SEL.

กดเพื่อเปลี่ยนโหนดวิดีโอออก

16. ปุ่ม PLAY/PAUSE (▶|▶)

เริ่ม/หยุดการเล่นแผ่นดิสก์ชั่วคราว

17. ปุ่ม SUBTITLE (▲)

ปุ่ม RETURN

18. ปุ่ม RETURN

กลับไปไปยังเมนูก่อนหน้านี้

19. ปุ่ม TITLE MENU (▶)

 
ปุ่ม KARAOKE (▼)

20. ปุ่ม KARAOKE (▼)

ใช้เพื่อเริ่มฟังก์ชันคาราโอเกะ

21. ปุ่ม CANCEL

ใช้เพื่อลบเมนู หรือข้อความแสดงสถานะออกจากหน้าจอ

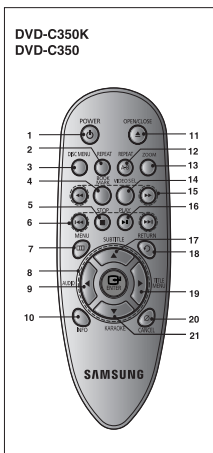

1. ปุ่ม POWER ของ DVD

เปิดหรือปิดเครื่องเล่น

2. ปุ่ม REPEAT

ใช้ในการเล่นซ้ำเรื่อง บท แทรก หรือทั้งแผ่น

3. ปุ่ม DISC MENU

เรียกเมนูของแผ่นดิสก์ ขึ้นมา

4. ปุ่ม BOOKMARK

ใช้ในการค้นหาไปยังหน้า/ ถอยหลังภายในแผ่นดิสก์

5. ปุ่ม STOP (■)

ใช้เพื่อข้ามเรื่อง บท หรือแทรก

6. ปุ่ม SKIP (◀|▶)

ใช้เพื่อข้ามเรื่อง บท หรือแทรก

7. ปุ่ม MENU

เรียกเมนูของเครื่องเล่น DVD ขึ้นมา

8. ปุ่ม ENTER/▲/▼/◀/▶

ปุ่มนี้ทำงานเหมือนเป็นสวิตช์เปลี่ยนหน้าที่ไปเรื่อยๆ

9. ปุ่ม AUDIO (◀)

ใช้ปุ่มนี้เพื่อเข้าไปยังฟังก์ชันเสียงต่างๆ ที่มีบนแผ่นดิสก์

10. ปุ่ม INFO

แสดงโหนดของแผ่นดิสก์ปัจจุบัน

11. ปุ่ม OPEN/CLOSE (▲)

เพื่อเปิดและปิดถาดวางแผ่นดิสก์

12. ปุ่ม REPEAT A-B

13. ปุ่ม ZOOM

14. ปุ่ม VIDEO SEL.

กดเพื่อเปลี่ยนโหนดวิดีโอออก

15. ปุ่ม SEARCH (◀|▶)

ใช้ในการค้นหาไปยังหน้า/ ถอยหลังภายในแผ่นดิสก์

16. ปุ่ม PLAY/PAUSE (▶|▶)

เริ่ม/หยุดการเล่นแผ่นดิสก์ชั่วคราว

17. ปุ่ม SUBTITLE (▲)

ปุ่ม RETURN

18. ปุ่ม RETURN

กลับไปไปยังเมนูก่อนหน้านี้

19. ปุ่ม TITLE MENU (▶)

ปุ่ม KARAOKE (▼)

20. ปุ่ม CANCEL

ใช้เพื่อลบเมนู หรือข้อความแสดงสถานะออกจากหน้าจอ

21. ปุ่ม KARAOKE (▼)

ใช้เพื่อเริ่มฟังก์ชันคาราโอเกะ

การเชื่อมต่อ

การเลือกการเชื่อมต่อ

ตัวอย่างต่อไปนี้ แสดงถึงข้อต่อทั่วไปที่ใช้เพื่อเชื่อมต่อเครื่องเล่น DVD เข้ากับโทรทัศน์และอุปกรณ์อื่นๆ.

ก่อนที่จะเชื่อมต่อเครื่องเล่น DVD

- ปิดเครื่องเล่น DVD, TV และอุปกรณ์อื่นๆ ก่อนที่จะเชื่อมต่อหรือถอดสายใดๆ ออกจากเครื่องเสมอ
- สำหรับข้อมูลเพิ่มเติมเกี่ยวกับอุปกรณ์แต่ละอย่าง ให้ศึกษาจากขั้นตอนที่อยู่ในคู่มือผู้ใช้ของอุปกรณ์อื่นๆ ที่คุณกำลังเชื่อมต่อ

A. การเชื่อมต่อไปยังโทรทัศน์ (สำหรับวิดีโอ)

- ใช้สายเคเบิลวิดีโอ/เสียง เชื่อมต่อช่องเสียบ VIDEO (สีเหลือง)/AUDIO (สีแดงและขาว) OUT ที่ด้านหลังของเครื่องเล่น DVD ไปยังช่องเสียบ VIDEO (สีเหลือง)/AUDIO (สีแดงและขาว) IN ของโทรทัศน์
- ปิดเครื่องเล่น DVD และโทรทัศน์.
- กดปุ่มเลือกสัญญาณเข้าบนรีโมทคอนโทรลของโทรทัศน์จนกระทั่งสัญญาณวิดีโอจากเครื่องเล่น DVD ปรากฏบนหน้าจอโทรทัศน์ของคุณ

หมายเหตุ

- อาจมีเสียงรบกวน ถ้าสายเสียงเสียบไว้ใกล้กับสายไฟมากเกินไป
- ถ้าคุณต้องการเชื่อมต่อไปยังแอมป์ไฟฟ้า โปรดศึกษาขั้นตอนจากหน้าการเชื่อมต่อแอมป์ไฟฟ้า
- จำนวนและตำแหน่งของช่องเสียบอาจแตกต่างกันไปตามประเภทของเครื่องรับโทรทัศน์ของคุณ
- โปรดอ่านคู่มือผู้ใช้ของโทรทัศน์
- ถ้ามีช่องเสียบสัญญาณเสียงเข้าบนโทรทัศน์ ให้เชื่อมต่อช่องเสียบนี้เข้ากับช่องเสียบ [AUDIO OUT][ซ้าย (สีขาว)] ของเครื่องเล่น DVD

B. ขั้วต่อไปยังระบบเสียง (แอมป์ฟลาย 2 แชนเนล, แอมป์ฟลายที่สนับสนุนระบบเสียงแบบ ดอลบีดิจิตอล, MPEG2 หรือ DTS)

- ใช้สายเสียง เชื่อมต่อช่องเสียง AUDIO (สีแดงและขาว) OUT ที่ด้านหลังของเครื่องเล่น DVD ไปยังช่องเสียง AUDIO (สีแดงและขาว) IN ของแอมป์ฟลาย
- ของแอมป์ฟลายใช้สายโคแอกเซียล (ไม่ใหม่) ให้เชื่อมต่อช่องเสียง DIGITAL AUDIO OUT (COAXIAL) ที่ด้านหลังของเครื่องเล่น DVD ไปยังช่องเสียง DIGITAL AUDIO IN (COAXIAL) ของแอมป์ฟลาย
- ใช้สายสัญญาณวิดีโอ เชื่อมต่อช่องเสียง VIDEO, COMPONENT OUT ที่ด้านหลังของเครื่องเล่น DVD ไปยังช่องเสียง VIDEO, COMPONENT IN ของโทรทัศน์ของคุณ ตามที่อธิบายในหน้า.
- เปิดเครื่องเล่น DVD, โทรทัศน์ และแอมป์ฟลาย
- กดปุ่มเลือกสัญญาณเข้าบนรีโมทคอนโทรลของโทรทัศน์จนกระทั่งสัญญาณ Component จากเครื่องเล่น DVD ปรากฏบนหน้าจอโทรทัศน์ของคุณ
- ตั้งค่า Video Output เป็น I-SCAN/ P-SCAN ในเมนู Display Setup.

 
C. การเชื่อมต่อโทรทัศน์ (อินเตอร์เฟซ / โปรเกรสซีฟ)

- ใช้สายคอมโพเนนต์วิดีโอ (ไม่ได้จัดส่งให้) เชื่อมต่อช่องเสียง COMPONENT VIDEO OUT ที่ด้านหลังของเครื่องเล่น DVD ไปยังช่องเสียง COMPONENT IN ของโทรทัศน์
- ใช้สายเสียง เชื่อมต่อช่องเสียง AUDIO (สีแดงและขาว) OUT ที่ด้านหลังของเครื่องเล่น DVD ไปยังช่องเสียง AUDIO (สีแดงและขาว) IN ของโทรทัศน์ เปิดเครื่องเล่น DVD และโทรทัศน์
- กดปุ่มเลือกสัญญาณเข้าบนรีโมทคอนโทรลของโทรทัศน์จนกระทั่งสัญญาณ Component จากเครื่องเล่น DVD ปรากฏบนหน้าจอโทรทัศน์ของคุณ
- ตั้งค่า Video Output เป็น I-SCAN/ P-SCAN ในเมนู Display Setup.

หมายเหตุ

- "โปรเกรสซีฟ" หมายความว่า

สัญญาณออกแบบโปรเกรสซีฟส่งผ่านการแสดงผลมากกว่าแบบอนาล็อกสองเท่า วิธีการสแกนแบบโปรเกรสซีฟจะให้อาชีพที่คมชัดกว่า และชัดเจนกว่า

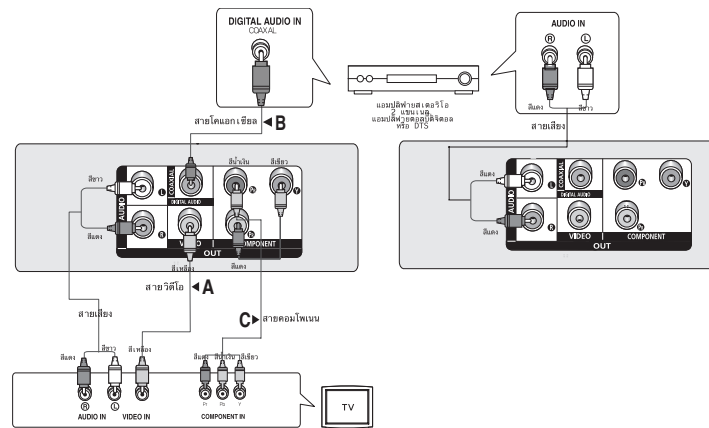

การทำงานพื้นฐาน

การเล่นแผ่นดิสก์

ก่อนเล่น

- เปิดโทรทัศน์ของคุณ และตั้งค่าให้ใช้สัญญาณวิดีโอเข้าที่ถูกต้อง โดยการกดปุ่ม TV/VIDEOบนรีโมทคอนโทรลของโทรทัศน์
- ถ้าคุณต่อระบบเสียงภายนอก ให้เปิดระบบเสียงของคุณและเลือกสัญญาณเสียงเข้าที่ถูกต้อง.

หลังจากที่เสียบปลั๊กเครื่องเล่นแล้ว ในครั้งแรกที่คุณกดปุ่ม POWER ของ DVD หน้าจอจะปรากฏขึ้น: กดปุ่ม ▲/▼ จากนั้น กดปุ่ม ENTER เพื่อเลือกภาษาที่ต้องการ (หน้าจอนี้จะปรากฏเฉพาะเมื่อคุณเสียบปลั๊ก เครื่องเล่นในครั้งแรกเท่านั้น) ถ้าคุณไม่ได้ตั้ง ภาษาสำหรับหน้าจอเริ่มต้น ภาษาที่ใช้หน้าจออาจเปลี่ยนแปลงไปทุกครั้งที่คุณปิดหรือเปิดเครื่อง ดังนั้น ให้แน่ใจว่าคุณได้เลือกภาษาที่คุณต้องการใช้ หลังจากที่คุณเลือกภาษาของเมนูแล้ว คุณสามารถเปลี่ยนแปลง ภาษาได้โดยกดปุ่ม (■/▲) ที่แผงด้านหน้าของเครื่องค้างไว้เป็น เวลามากกว่า 5 วินาที ในขณะที่ไม่ได้ใส่แผ่นดิสก์ไว้ในเครื่อง จากนั้นหน้าจอ SELECT MENU LANGUAGE จะปรากฏขึ้นอีกครั้ง ซึ่งคุณสามารถรีเซ็ตภาษาที่คุณเลือกใช้ได้

การใช้ Search และ Skip

ระหว่างการเล่น คุณสามารถค้นหาผ่านแต่ละบท หรือแทร็กได้อย่างรวดเร็ว หรือใช้ฟังก์ชันข้าม เพื่อกระโดดไปยังบทถัดไปได้

การค้นหานาฬ หรือแทร็ก

ระหว่างการเล่น กดปุ่ม SEARCH (◀or▶) บนรีโมทคอนโทรลเป็นเวลาานานกว่า 1 วินาที

DVD	2X, 4X, 64X, 128X
VCD	4X, 8X
CD	2X, 4X, 8X

หมายเหตุ

- ความเร็วที่ระบุในฟังก์ชันนี้อาจแตกต่างจากความเร็วจริงในการเล่น
- คุณจะไม่ได้ยินเสียงในระหว่างโหมดการค้นหา (ยกเว้น CD).

การข้ามแทร็ก






ระหว่างการเล่น กดปุ่ม SKIP (◀◀ หรือ ▶▶)

- ในขณะที่กำลังเล่น DVD ถ้าคุณกดปุ่ม SKIP (▶▶) เครื่องจะเล่นข้ามไปยังบทถัดไป ถ้าคุณกดปุ่ม (◀◀) เครื่องจะย้ายไปยังจุดเริ่มต้นของบท การกดเพิ่มอีกครั้ง จะเลื่อนไปยังจุดเริ่มต้นของบทก่อนหน้า
- ในขณะที่กำลังเล่น VCD หรือ CD, ถ้าคุณกดปุ่ม SKIP (▶▶) เครื่องจะข้ามไปเล่นแทร็กถัดไป ถ้าคุณกดปุ่ม SKIP (◀◀) เครื่องจะเริ่มเล่นจุดเริ่มต้นของแทร็ก การกดเพิ่มอีกครั้ง จะเลื่อนไปยังจุดเริ่มต้นของแทร็กก่อนหน้า
- ถ้าแทร็กมีความยาวเกิน 15 นาทีในขณะที่กำลังเล่น VCD และ คุณกดปุ่ม ▶▶ เครื่องจะเดิหน้าไป 5 นาที ถ้าคุณกดปุ่ม ◀◀ เครื่องจะถอยหลังไป 5 นาที

การใช้ฟังก์ชัน Function

ในขณะที่กำลังเล่น DVD/VCD/MPEG4

1. ระหว่างการเล่น กดปุ่ม INFO บนรีโมทคอนโทรล
2. กดปุ่ม ▲/▼ เพื่อเลือกรายการที่ต้องการ
 - เมื่อ VCD เมนูแบบ <Disc Menu> อาจไม่ทำงาน
3. กดปุ่ม ◀▶ เพื่อทำการตั้งค่าที่ต้องการ จากนั้นกดปุ่ม ENTER
4. ในการทำให้หน้าจอหายไป กดปุ่ม INFO อีกครั้ง

	ในการเข้าใช้งานคำบรรยายที่ต้องการเมื่อมีภาพยนตร์บนแผ่นมากกว่าหนึ่งเรื่อง ตัวอย่างเช่นถ้ามีภาพยนตร์บนแผ่น DVD มากกว่าหนึ่งเรื่องภาพยนตร์แต่ละเรื่องจะน ดงขึ้น
	แผ่น DVD ส่วนมากจะถูกบันทึกไว้เป็นบท เพื่อที่จะจะได้สามารถค้นหาและเลื่อนไปยัง ส่วนที่ต้องการชมได้อย่างรวดเร็ว (เหมือนกับแทร็กใน VCD)
	อนุญาตให้เล่นภาพยนตร์โดยเริ่มจากเวลาที่ต้องการดูต้องป้อนเวลาเริ่มต้นเพื่อเป็นค่าอ้างอิง ฟังก์ชันการค้นหาด้วยเวลาไม่ทำงานบนแผ่นดี ิกบางแผ่น
	ตามภาษาที่มีอยู่ในคำบรรยายในดิสก์ คุณสามารถเลือกภาษาของคำบรรยาย หรือหากคุณไม่ต้องการดูคำบรรยาย คุณสามารถปิดไม่ให้แสดงบนหน้าจอได้ แผ่นดิสก์ DVD สามารถมีคำบรรยายที่แตกต่างกันได้ถึง 32 ภาษา
	กรอกข้อมูลและกดปุ่ม ◀/▶ เพื่อเข้าถึงฟังก์ชันเสียง, มุม, บั๊กมาร์ก, มุมมอง EZ และคุณสมบัติอื่นๆของชาวต้นแรก ในตัวอย่างข้างต้นแทร็กจะเล่นเป็นภาษาอังกฤษ 5.1CH แผ่นดิสก์ DVD สามารถมีชาวต้นแรกที่แตกต่างกันได้ถึง 8 ภาษา ที่ต้องการ ดิสก์ DVD บางแผ่นมีฟังก์ชัน Angle มากกว่าห้าอย่าง ฟังก์ชัน Bookmark ช่วยให้สามารถค้นหาแทร็กหรือฉาก DVD หรือ VCD ได้โดยง่ายและรวดเร็ว (ปิดเมนู) ฟังก์ชันมุมมอง EZ ใช้เพื่อเปลี่ยนอัตราส่วนภาพใน DVD, ฟังก์ชัน ZOOM ใช้เพื่อขยายภาพ DVD

การใช้เมนู Disc และ Title Menu

ระหว่างการเล่นแผ่นดิสก์ DVD ให้กดปุ่ม Disc Menu / Title Menu บนรีโมทคอนโทรล

หมายเหตุ

- ขึ้นอยู่กับแผ่นดิสก์ เมนูแผ่น<Disc Menu / Title Menu> อาจไม่ทำงาน
- นอกจากนี้ คุณสามารถใช้ เมนูแผ่น <Disc Menu> โดยใหม่ DISC MENU บนรีโมทคอนโทรลก็ได้
- เมนูหนึ่ง <Title Menu> จะแสดงเฉพาะเมื่อมีภาพยนตร์ ตั้งแต่ 2 เรื่องขึ้นไปอยู่ในแผ่นดิสก์เท่านั้น

เล่นซ้ำ

เล่นซ้ำแทร็ก บท เรื่อง ส่วนที่เลือก (A-B) หรือทั้งแผ่นดิสก์

ในขณะที่กำลังเล่น DVD/VCD

- กดปุ่ม **REPEAT** เพื่อเลือก บท (Chapter), เรื่อง(Title), แผ่น(Track), ปัด(Disc) หรือ Repeat:Off
 - DVD จะเล่นซ้ำที่ละบทหรือเรื่อง, VCD จะเล่นซ้ำทล ะแทร็กหรือทั้งแผ่น
 - บท (Chapter) : เล่นซ้ำบทที่กำลังเล่นอยู่
 - แผ่น(Track) : เล่นซ้ำแทร็กที่กำลังเล่นอยู่
 - เรื่อง(Title) : เล่นซ้ำเรื่องที่กำลังเล่นอยู่
 - ปัด(Disc) : เล่นซ้ำแผ่น ดี ที่กำลัง เล่นอยู่
 - Repeat: Off

การใช้ฟังก์ชัน A-B Repeat

- กดปุ่ม **REPEAT A-B** ที่จุดซึ่งคุณต้องการให้การเล่นซ้ำหยุด (A).
- กดปุ่ม **REPEAT A-B** ที่จุดซึ่งคุณต้องการให้การเล่นซ้ำหยุด (B).
- เมื่อต้องการเล่นแบบปกติ ให้กดปุ่ม เล่นซ้ำ A-B (REPEAT A-B) จนกว่าหน้าจอจะแสดงผลเล่นซ้ำ : ปัด (Off).

หมายเหตุ

- A-B_REPEAT <ซ้ำ A-B> ไม่อนุญาตให้จุดตั้งจุด (B)ภายใน 5 วินาที หลังจากที่คุณตั้งค่าจุด (A) แล้ว
- ขึ้นอยู่กับแผ่นดิสก์ ฟังก์ชันการเล่นซ้ำ อาจไม่ทำงาน
- เมื่อ VCD เมนูแผ่น <Disc Menu> อาจไม่ทำงาน

เล่นแบบซ้ำ

คุณสมบัตินี้ช่วยให้คุณเล่นซ้ำโดยใช้ความเร็วลดลงในฉากที่ประกอบด้วย กีฬา การ เต้นรำ การ เล่นเครื่องดนตรี ฯลฯ เพื่อที่คุณจะได้ ามารถศึกษาสิ่งเหล่านั้นได้อย่างละเอียดมากขึ้น
ในขณะที่กำลังเล่น DVD

- ระหว่างการเล่น กดปุ่ม PLAY/PAUSE (▶||)
- กดปุ่ม SEARCH (▶▶) ค้างไว้ เพื่อเลือกความเร็วการ เล่นระหว่าง 1/2, 1/4, 1/8, 1/16 เท่าของความเร็วกติในระ หว่างที่เล่นโหมด PAUSE.

ฟังก์ชันขั้นสูง

การปรับอัตราส่วนภาพ (มุมมอง EZ)

ในการเล่นโดยใช้อัตราส่วนภาพ (DVD)

- ระหว่างการเล่น กดปุ่ม **INFO** บนรีโมทคอนโทรล
- กดปุ่ม ▲/▼ เพื่อเลือก ทาง สัด (Shortcut) จากนั้นกดปุ่ม **ENTER**
- กดปุ่ม ◀/▶ เพื่อเลือก **EZ View** จากนั้นกดปุ่ม **ENTER**
 - แต่ละครั้งที่กดกดปุ่ม มุมมอง ◀/▶ ขนาดของจอแสดงผลจะเปลี่ยนแปลง. สำหรับการฟักสีของขนาดของจอแสดงผลและรายการเกี่ยวเนื่องที่มีการเปลี่ยนแปลงขนาด โปรดดูคอลัมน์ถัดไป.

ถ้าคุณกำลังใช้โทรทัศน์แบบ 16:9 TV

สำหรับแผ่นดิสก์ที่มีตราส่วนภาพ 16:9

- WIDE SCREEN
- SCREEN FIT
- ZOOM FIT

สำหรับแผ่นดีส่วนภาพ 4:3

- NORMAL SCREEN
- SCREEN FIT
- ZOOM FIT
- VERTICAL FIT

ถ้าคุณกำลังใช้โทรทัศน์แบบ 4:3:9 TV

สำหรับแผ่นดิสก์ที่มีตราส่วนภาพ 16:9

- 4:3 Letter Box
- 4:3 Pan Scan
- SCREEN FIT
- ZOOM FIT

สำหรับแผ่นดีส่วนภาพ 4:3

- WIDE SCREEN
- SCREEN FIT
- ZOOM FIT

หมายเหตุ

ฟังก์ชันอาจมีการทำงานแตกต่างจากนี้ ทั้งนี้ขึ้นอยู่กับชนิดของแผ่นดิสก์

การเลือกภาษาของเสียงพากย์

คุณสามารถเลือกภาษาของเสียงพากย์ที่ต้องการได้โดย างรวดเร็วและง่ายดายด้วยปุ่ม AUDIO

การใช้ปุ่ม AUDIO (DVD/VCD/MPEG4)

- กดปุ่ม **AUDIO/◀** จะเปลี่ยนไปเมื่อมีการกดปุ่มซ้ำไปเรื่อยๆภาษา ษาของเสียงพากย์ จะเขียนแทนด้วยตัวย่อ.
กดปุ่ม **AUDIO/◀** ที่รีโมทซ้ำเพื่อเลือกสัญญาณเสียงที่ต้องการบน MPEG4 จากนั้นกด **ENTER**.

หมายเหตุ

- ฟังก์ชันนี้ขึ้นอยู่กับภาษาของเสียงพากย์ที่มีการเข้ารหัสไว้บนแผ่นดิสก์ และอาจไม่ทำงาน
- แผ่นดิสก์ DVD ามารถจุเสียงได้ถึง 8 ภาษา

การเลือกภาษาของคำบรรยาย

คุณสามารถเลือกคำบรรยายที่ต้องการได้อย่างรวดเร็วและง่ายดายด้วยปุ่ม **SUBTITLE / ▲**.

การใช้ปุ่ม SUBTITLE (DVD/MPEG4)

- กดปุ่ม **SUBTITLE / ▲** ภาษาของคำบรรยายจะเขียนแทนด้วยตัวย่อ คำบรรยายจะเปลี่ยนไปเมื่อมีการกดปุ่มซ้ำไปเรื่อยๆ
- ในการลบไอคอน **SUBTITLE** ให้กดปุ่ม **SUBTITLE / ▲**

หมายเหตุ

- ฟังก์ชันนี้ขึ้นอยู่กับว่ามีคำบรรยายใดที่มีการเข้ารหัสไว้บนแผ่นดิสก์ และอาจไม่ทำงานในแผ่น DVD ทุกแผ่น
- แผ่นดิสก์ DVD สามารถดูภาษาของคำบรรยายได้ถึง 32 ภาษา

การเปลี่ยนมุมกล้อง

เมื่อแผ่น DVD ประกอบด้วยมุมกล้องหลายมุมในฉากบางฉากคุณสามารถใช้ฟังก์ชัน **ANGLE** ได้

การใช้ฟังก์ชัน ANGLE (DVD)

ถ้าแผ่นดิสก์ประกอบด้วยมุมกล้องหลายมุม คำว่า ANGLE จะปรากฏบนหน้าจอ

- ระหว่างการเล่น กดปุ่ม **INFO** บนรีโมทคอนโทรล
- กดปุ่ม **▲/▼** เพื่อเลือก ทาง สัด (**Shortcut**) จากนั้นกดปุ่ม **ENTER**
- กดปุ่ม **◀/▶** เพื่อเลือก **Angle** จากนั้นกดปุ่ม **ENTER**
- กดปุ่ม **◀/▶** เพื่อเลือกการที่ต้องการ

หมายเหตุ

- ถ้าแผ่นดิสก์มีเพียงมุมกล้องเดียว คุณสมบัตินี้จะไม่ทำงาน ในปัจจุบัน มีแผ่นดิสก์เพียงไม่กี่แผ่นที่มีคุณสมบัตินี้
- ขึ้นอยู่กับแผ่นดิสก์ ฟังก์ชันเหล่านี้อาจไม่ทำงาน

การใช้ฟังก์ชัน Bookmark

คุณสมบัตินี้อนุญาตให้คุณทำที่คั่นส่วนของ DVD หรือ VCD เพื่อที่คุณจะ สามารถค้นหา ส่วนนี้ในภายหลังได้อย่างรวดเร็ว

การใช้ฟังก์ชัน Bookmark Function (DVD/VCD)

- ระหว่างการเล่น กดปุ่ม **INFO** บนรีโมทคอนโทรล
- กดปุ่ม **▲/▼** เพื่อเลือก ทาง สัด (**Shortcut**) จากนั้นกดปุ่ม **ENTER**.
- กดปุ่ม **◀/▶** เพื่อเลือก กำหนดช่วงตอน (**Bookmark**) จากนั้นกดปุ่ม **ENTER**.
- เมื่อคุณไปถึงฉากที่คุณต้องการทำเครื่องหมาย ให้กดปุ่ม **ENTER** คุณสามารถทำเครื่องหมายในแต่ละครั้งได้สูงสุด 12 ฉาก

หมายเหตุ

- ขึ้นอยู่กับแผ่นดิสก์ ฟังก์ชัน Bookmark อาจไม่ทำงาน
- เมื่อ VCD เมนูแผ่น <Disc Menu> อาจไม่ทำงาน

การเรียกฉากที่ทำเครื่องหมายไว้

1~3. ขั้นตอนแรก 1~3 ขั้นตอนนั้นเหมือนกับที่อธิบายใน "การใช้ฟังก์ชัน Bookmark".

- กดปุ่ม **◀/▶** เพื่อเลือกฉากที่ทำเครื่องหมายไว้
- กดปุ่ม **PLAY/PAUSE (▶||)** เพื่อข้ามไปยังฉากที่ทำ เครื่องหมายไว้

การลบ Bookmark

- 1~3. ขั้นตอนแรก 1~3 ขั้นตอนนั้นเหมือนกับที่อธิบายใน "การใช้ ฟังก์ชัน Bookmark".
- กดปุ่ม **◀/▶** เพื่อเลือกหมายเลขที่คั่นที่คุณต้องการลบ
- กดปุ่ม **CANCEL** เพื่อลบหมายเลขที่คั่น

การใช้ฟังก์ชัน Zoom

- การใช้ฟังก์ชัน Zoom (DVD/VCD) (DVD-C350K, DVD-C350)

- ระหว่างการเล่น กดปุ่ม **ZOOM** บนรีโมทคอนโทรล

- การใช้ฟังก์ชัน Zoom (DVD/VCD) DVD-C450K,DVD-C450,DVD-C360)

- ระหว่างการเล่น กดปุ่ม **INFO** บนรีโมทคอนโทรล
- กดปุ่ม **▲/▼** เพื่อเลือก ทาง สัด (**Shortcut**) จากนั้นกดปุ่ม **ENTER**
- กดปุ่ม **◀/▶** เพื่อเลือก ขุมภาพ (**Zoom**) จากนั้นกดปุ่ม **ENTER**
 - ระหว่างการเล่น DVD หรือ VCD กด **ENTER** เพื่อซูมขยายในระดับ 2X/3X/4X/Normal ตามลำดับ

คลิปเมนูสำหรับ MP3/WMA/ JPEG/MPEG4/CD เพลง

CD เพลง หรือแผ่นดิสก์ที่มีไฟล์ MP3/WMA/JPEG ประกอบด้วยเพลง และ/หรือภาพต่างๆ สามารถถูกจัดเรียงไว้ในโฟลเดอร์ต่างๆ ตั้ง ดงด้านล่าง
วิธีการใส่ไฟล์ลงในโฟลเดอร์ต่างๆ นั้นเหมือนกับการใช้คอมพิวเตอร์.



เปิดดูวางแผนแผ่นดิสก์วางแผนดิสก์ลงบนถาดเปิดถาดถาดจะปิดและหน้าจอนี้จะแสดงขึ้น

การเลือกโฟลเดอร์

คุณสามารถเลือกโฟลเดอร์ได้ทั้งในโหมด Stop หรือ Play

- ในการเลือกโฟลเดอร์เม

กดปุ่ม **RETURN** เพื่อไปยังโฟลเดอร์เม หรือกดปุ่ม **▲/▼** เพื่อเลือก ".." และกด **ENTER** เพื่อไปยังโฟลเดอร์เม

การเล่น MP3/WMA/CD เพลง

- เปิดดูวางแผนแผ่นดิสก์ วางแผนดิสก์ลงบนถาด ปิดถาด
 - เครื่องจะเล่นไฟล์เพียงชนิดเดียวเท่านั้น เมื่อแผ่นดิสก์หรือโ ฟลเดอร์บรรจุทั้งไฟล์ MP3 และ WMA
- กดปุ่ม **▲/▼** เพื่อเลือกไฟล์เพลง กด **ENTER** เพื่อเริ่มเล่นไฟล์เพลง

การเล่นซ้ำ/สุ่ม

กดปุ่ม **REPEAT** เพื่อเปลี่ยนโหมดการเล่น ซึ่งจะมีโหมด 4 โหมดได้แก่ ปิด (Off), แทร็ก (Track), แฟ้ม (Folder) และ การเล่นสุ่ม (Random).

- ปิด <Off>: การเล่นปกติ
- แทร็ก <Track>: เล่นแทร็กปัจจุบันซ้ำ
- แฟ้ม <Folder>: เล่นไฟล์เดือปัจจุบันซ้ำ
- การเล่นสุ่ม <Random>: ไฟล์ในแผ่นดิสก์จะเล่น

ในการเล่นต่อตามปกติ ให้กดปุ่ม **CANCEL**

ไฟล์ MP3/WMA บน CD-R

- เมื่อคุณอัดไฟล์ MP3 หรือ WMA ไว้บนแผ่น CD-R โปรดคำนึงถึงสิ่งต่อไปนี้
- ไฟล์ MP3 หรือ WMA ของคุณควรเป็นรูปแบบ ISO 9660 หรือ JOLIET
 - ไฟล์MP3หรือ WMA รูปแบบ ISO 9660 และ Joliet นั้นใช้งานได้กับระบบ DOS และ Windows ของ Microsoft และกับระบบMacของ Apple รูปแบบนี้เป็นที่นิยมใช้กันมากที่สุด
 - เมื่อเปลี่ยนชื่อไฟล์ MP3 หรือ WMA อย่าใช้ตัวอักษรเกิน 8 ตัว และให้ป้อน “.mp3, .wma” เป็นนามสกุลของไฟล์
 - รูปแบบชื่อทั่วไป: Title.mp3 หรือ Title.wma เมื่อตั้งชื่อ ให้แน่ใจว่าคุณใช้ตัวอักษร 8 ตัวหรือน้อยกว่า ไม่เว้นช่องว่างภายในชื่อและหลีกเลี่ยงการใช้ตัวอักษรพิเศษที่ประกอบด้วย: (./\|=>+).
 - ใช้อัตราการถ่ายโอนการขยายขนาดอย่างน้อย 128Kbps เมื่อบันทึกไฟล์ MP3 โดยพื้นฐานแล้ว คุณภาพเสียงของไฟล์ MP3 นั้นขึ้นอยู่กับอัตราการบีบขนาด/ขยายขนาดที่คุณเลือกใช้ การที่จะให้ได้เสียงระดับ CD ต้องใช้อัตราการสุ่มนาฬิกา/ดิจิทัล ซึ่งมีการแปลงเป็นรูปแบบ MP3 อย่างน้อย 128Kbps จนกระทั่งถึง 160Kbps อย่างไรก็ตาม การเลือกอัตราที่สูงกว่านี้ เช่น 192Kbps ก็มักไม่ทำให้เสียงมีคุณภาพดีขึ้น ในทางตรงข้าม ไฟล์ที่มีอัตราการขยายขนาดต่ำกว่า 128Kbps จะไม่สามารถเล่นได้อย่างเหมาะสม.
 - ใช้อัตราการถ่ายโอนการขยายขนาดอย่างน้อย 64Kbps เมื่อบันทึกไฟล์ WMA โดยพื้นฐานแล้ว คุณภาพเสียงของไฟล์ WMA นั้นขึ้นอยู่กับอัตราการบีบขนาด/ขยายขนาดที่คุณเลือกใช้การที่จะให้ได้เสียงระดับ CD ต้องใช้อัตราการสุ่มนาฬิกา/ดิจิทัล ซึ่งมีการแปลงเป็นรูปแบบ WMA อย่างน้อย 64Kbps จนกระทั่งถึง 192Kbps ไฟล์ที่มีอัตราการขยายขนาดต่ำกว่า 64Kbps หรือสูงกว่า 192Kbps จะไม่สามารถเล่นได้อย่างเหมาะสม.
 - อย่าพยายามอัดไฟล์ MP3 ที่มีการคุ้มครองด้านลิขสิทธิ์ ไฟล์ “ที่มีการป้องกัน” บางไฟล์ถูกเข้ารหัสไว้ เพื่อป้องกันการคัดลอกอย่างผิดกฎหมาย ไฟล์เหล่านี้ประกอบด้วยไฟล์ชนิดต่างๆ ต่อไปนี้: Windows Media (เครื่องหมายการค้าจดทะเบียนของ Microsoft Inc) และ SDMI (เครื่องหมายการค้าจดทะเบียนของ SDMI Foundation) คุณไม่สามารถคัดลอกไฟล์เหล่านี้ได้
 - **สำคัญ:** คำแนะนำด้านบน ไม่ได้เป็นเครื่องประกันว่าเครื่องเล่น DVD จะเล่นไฟล์ MP3 ได้ หรือประกันว่าคุณภาพเสียงที่ดีของไฟล์ คุณควรทราบว่า เทคโนโลยีบางอย่าง และวิธีการบันทึกไฟล์ MP3 บนแผ่น CD-R นั้นทำให้ไม่สามารถเล่นไฟล์เหล่านั้นบนเครื่องเล่น DVD ของคุณได้ (ในบางกรณีจะได้เสียงที่มีคุณภาพลดลง หรือเครื่องเล่นไม่สามารถอ่านไฟล์ได้)
 - เครื่องเล่นนี้สามารถเล่นไฟล์ได้สูงสุด 500 ไฟล์ และไฟล์ต่อได้ 500 ไฟล์ต่อแผ่น

เล่นไฟล์ MPEG4

ฟังก์ชัน เล่น MPEG4

ไฟล์ AVI ใช้เพื่อเก็บข้อมูลเสียงและภาพ เฉพาะไฟล์รูปแบบ AVI ที่มีนามสกุล .avi เท่านั้นที่สามารถเล่นได้

1. เปิดหน้าต่างแผ่นดิสก์ วางแผ่นดีดลงบนถาด ปิดถาด

2. กดปุ่ม ▲/▼ เพื่อเลือกไฟล์avi (DivX/XviD) จากนั้นกดปุ่ม ENTER.

เล่นซ้ำ

- กดปุ่ม REPEAT เพื่อเปลี่ยนโหมดการเล่น ซึ่งจะมีโหมด 3 โหมดได้แก่ แทร็ก (Track), แฟ้ม (Folder) และ ปิด (Off).
- แทร็ก <Track>: เล่นแทร็กปัจจุบันซ้ำ
 - แฟ้ม <Folder>: เล่นไฟล์เดือรปัจจุบันซ้ำ
 - ปิด <Off>: การเล่นปกติ

คำอธิบายฟังก์ชัน MPEG4

ฟังก์ชัน	คำอธิบาย
ข้าม (◀ หรือ ▶)	ระหว่างการเล่น กดปุ่ม ◀ หรือ ▶ เครื่องจะไปยังข้างหน้าหรือถอยหลังไป 5 นาที.
ค้นหา (◀ หรือ ▶)	ระหว่างการเล่น กดปุ่ม SEARCH (◀ หรือ ▶) และกดอีกครั้ง เพื่อค้นหาด้วยความเร็วที่สูงขึ้น ใช้ในการค้นหาในไฟล์AVI ด้วยความเร็วที่สูงขึ้น. (2X, 4X, 8X)
เล่นภาพช้า	ใช้ในการค้นหาในไฟล์ AVI ด้วยความเร็วที่ต่ำลง (1/2X, 1/4X, 1/8X, 1/16X)

- ฟังก์ชันเหล่านี้อาจไม่ทำงาน ทั้งนี้ขึ้นอยู่กับไฟล์ MPEG4

ไฟล์ AVI บน CD-R

เครื่องเล่นนี้ สามารถเล่นรูปแบบการบีบขนาดวิดีโอต่อไปนี้ภายในไฟล์รูปแบบ AVI ได้:

- เนื้อหา DivX 3.11
- เนื้อหา DivX 4 (ที่ใช้โปรไฟล์ MPEG4 ธรรมดา)
- เนื้อหา DivX 5 (โปรไฟล์MPEG-4 ธรรมดา บางคุณสมบัติเพิ่มเติม เช่น เฟรม องค์ทิศทาง นอกจากนี้ก็Opel และ GMC ด้วย)
- เนื้อหาที่สอดคล้องกับ XviD MPEG-4

เครื่องเล่นนี้สนับสนุนความละเอียดทุกระดับ จนถึงความละเอียด สูงสุดด้านล่าง

DivX5
720 x 480 @30fps 720 x 576 @25fps : อัตราบิตสูงสุด: : 4Mbps

หมายเหตุ

- เครื่องอาจไม่สามารถเล่นไฟล์ MPEG-4 บางไฟล์สร้าง จากคอมพิวเตอร์ส่วนบุคคลได้ นับเป็นเหตุผลว่า ทำไม เครื่องจึงไม่ นับ รุ่นชนิด Codec, เวอร์ชัน และความละเอียดที่สูงกว่าที่ระบุในข้อมูลเฉพาะ
- เครื่องเล่นสนับสนุนการเขียน CD-R/RW ในมาตรฐาน MPEG4 ที่สอดคล้องกับ รูปแบบ ISO9660

การเล่นไฟล์สื่อโดยใช้คุณสมบัติ USB HOST

(เฉพาะซีดีเพลง DVD-DVD-C450K,C450,C360)

คุณสามารถเพลิดเพลินกับไฟล์สื่อ เช่น ภาพ ภาพยนตร์ และเสียงดนตรี ที่บันทึกในเครื่องเล่น MP3, หน่วยความจำ USB หรือกล่องดิจิทัลที่มีคุณภาพเสียงระดับสูงได้ด้วยการเชื่อมต่ออุปกรณ์ที่เก็บข้อมูลกับพอร์ต USB ของเครื่องเล่น DVD

การใช้คุณสมบัติ USB HOST

1. ต่ออุปกรณ์ USB กับพอร์ต USB ที่ด้านหน้าเครื่อง
2. กดปุ่ม ▲/▼ เพื่อเลือกไฟล์ในอุปกรณ์ USB กด ENTER เพื่อเปิดไฟล์ การนำอุปกรณ์ USB ออกอย่างปลอดภัย

หมายเหตุ

- แต่ละครั้งที่กดปุ่ม USB บนรีโมทคอนโทรล การเลือกอุปกรณ์ USB จะปรากฏขึ้น
- "USB" จะปรากฏที่หน้าจอแสดงผล
- เมื่อเล่นแผ่น DVD หรือ CD และเสียงอุปกรณ์ USB ข้อความ "กด USB เพื่อเลือกอุปกรณ์" จะปรากฏขึ้นที่มุมบนซ้ายชั่วขณะ
- หน้าจอ USB MENU จะปรากฏบนหน้าจอทีวีและเล่นไฟล์ที่ บันทึกไว้

การนำอุปกรณ์ USB ออกอย่างปลอดภัย

เพื่อป้องกันความเสียหายกับหน่วยความจำที่จัดเก็บในอุปกรณ์ USB ให้ดำเนินการนำอุปกรณ์ออกอย่างปลอดภัยก่อนถอดสายเคเบิล USB

- กดปุ่ม STOP (■)
- ถอดสาย USB ออก

ข้ามหน้าจอ/ถอยหลัง

ระหว่างการเล่น กดปุ่ม (◀▶/⏮⏭)

- เมื่อมีไฟล์มากกว่า▶▶ ไฟล์เมื่อคุณกดปุ่มนี้ ไฟล์ถัดไปจะถูกเลือก

- เมื่อมีไฟล์มากกว่า◀◀ ไฟล์เมื่อคุณกดปุ่มนี้ ไฟล์ก่อนหน้าจะถูกเลือก การเล่นอย่างรวดเร็ว

การเล่นอย่างรวดเร็ว

หากต้องการเล่นแผ่นด้วยความเร็วที่สูงขึ้น กด (◀▶/⏮⏭) ระหว่างการเล่น

- แต่ละครั้งที่กดปุ่มใดปุ่มหนึ่ง ความเร็วในการเล่นจะเปลี่ยนแปลงดังนี้: 2x → 4x → 8x.

อุปกรณ์ที่สามารถใช้งานร่วมกันได้

1. อุปกรณ์ USB ที่สนับสนุน USB Mass Storage v1.0 (อุปกรณ์ USB ที่ทำงานเป็นดิสก์แบบถอดออกได้ใน Windows (2000 ขึ้นไป) โดยไม่ต้องติดตั้งไดรเวอร์เพิ่มเติม)
2. เครื่องเล่น MP: เครื่องเล่น MP3 ประเภท HDD และแฟลช
3. กล่องดิจิทัล: กล่องที่สนับสนุน USB Mass Storage v1.0
 - กล่องที่ทำงานเป็นดิสก์แบบถอดออกได้ใน Windows (2000 ขึ้นไป) โดยไม่ต้องติดตั้งไดรเวอร์เพิ่มเติม
4. ไดรฟ์ USB HDD และ USB Flash: อุปกรณ์ที่สนับสนุน USB 2.0 หรือ USB 1.1

- คุณอาจเห็นความแตกต่างของคุณภาพการเล่นเมื่อเชื่อมต่อ อุปกรณ์ USB 1.1
5. ตัวอ่านการ์ด USB: ตัวอ่านการ์ด USB แบบ 1 ช่อง และตัวอ่านการ์ด USB แบบหลายช่อง
 - ตัวอ่านการ์ด USB อาจไม่ได้รับการสนับสนุน ทั้งนี้ขึ้นอยู่กับ บริษัทผู้ผลิต
 - หากคุณติดตั้งอุปกรณ์หน่วยความจำหลายตัวในตัวอ่านการ์ดแบบหลายช่อง คุณอาจประสบปัญหาได้
 6. หากคุณใช้สายต่อ USB เครื่องอาจมองไม่เห็นอุปกรณ์ USB ดังกล่าว
 - ไม่สนับสนุน CBI (ควบคุม/กลุ่ม/จัดจังหวะ)
 - ไม่สนับสนุนกล่องดิจิทัลที่ใช้โปรโตคอล PTP หรือต้องมีการติดตั้งโปรแกรมเพิ่มเติมเมื่อเชื่อมต่อกับพีซี
 - ไม่สนับสนุนอุปกรณ์ที่ใช้ระบบไฟล์แบบ NTFS (สนับสนุนเฉพาะระบบไฟล์แบบ FAT 16/32 (ตารางการจัดสรรไฟล์แบบ 16/32) เท่านั้น)
 - เครื่องเล่น MP3 บางรุ่น อาจไม่ทำงานเมื่อเชื่อมต่อกับผลิตภัณฑ์ ทั้งนี้ขึ้นอยู่กับขนาดเคเบิลของระบบ ไฟล์
 - ไม่สนับสนุนฟังก์ชัน USB HOST (โฮสต์ USB) หากเชื่อมต่อ กับผลิตภัณฑ์ที่ถ่ายโอนไฟล์สื่อข้อความโดยใช้โปรแกรมที่ผู้ผลิตระบุสำหรับเครื่อง
 - อย่างช้าๆกับอุปกรณ์ประเภท MTP (โปรโตคอลถ่ายโอนสื่อข้อมูล) ที่เปิดใช้งาน Janus
 - ฟังก์ชันโฮสต์ USB ของผลิตภัณฑ์นี้ไม่ได้อัปเดตสนับสนุนอุปกรณ์ USB ทั้งหมด

การตัดข้อมูลซีดี (เฉพาะซีดีเพลง DVD-DVD-C450K,C450,C360)

คุณสมบัตินี้ช่วยให้คุณสามารถคัดลอกไฟล์เสียงจากดิสก์ไปยังอุปกรณ์ USB เป็นรูปแบบ MP3 ได้

1. เปิดถาดวางแผ่นดิสก์ วางแผ่นซีดีเพลง (CD DA) บนถาด แล้วปิดถาด ต่ออุปกรณ์ USB กับช่อง USB ที่ด้านหน้าเครื่องเล่น หน้าจอจะปรากฏขึ้น.กดปุ่ม ENTER เพื่อเลือก DISC (ดิสก์)
2. ในขณะที่เครื่องอยู่ในโหมดหยุดให้กดปุ่ม **RETURN** เพื่อแสดงหน้าจอ Ripping.
3. กดปุ่ม ▲/▼ เพื่อเลือก เพื่อเลือกไฟล์ที่ปรารถนา, จากนั้นกดปุ่ม ENTER (ป้อน) เพื่อเลือกไฟล์ทั้งหมดที่จะทำการคัดลอก
 - หากต้องการยกเลิกการเลือกไฟล์ทั้งหมดสำหรับตัด ลอก กดปุ่ม ENTER (ป้อน) อีกครั้ง.
4. กดปุ่ม ► หรือ ▼เพื่อเลือกเมนู Ripping เริ่ม จากนั้นกดปุ่ม ENTER.
 - เมนูตัดข้อมูลมีปุ่ม ปุ่มคือ:
 - Mode (Fast/Normal)
 - บิตเรต กด ENTER (ป้อน) เพื่อเปลี่ยน 128kbps →192kbps →256kbps →320kbps.
 - การเลือกอุปกรณ์ กด ENTER (ป้อน) เพื่อเปลี่ยนระหว่างอุปกรณ์ (สูงสุด 4)
 - เลือก - ไม่เลือก กด ENTER เพื่อเปลี่ยนจาก Select all (เลือกทั้งหมด) หรือ Select none (ไม่เลือกเลย).
 - เริ่มตัดข้อมูล กด ENTER (ป้อน) เพื่อเริ่มขั้นตอนการตัดข้อมูล

หมายเหตุ

- เมื่อการตัดข้อมูลซีดีกำลังอยู่ระหว่างการประมวลผล เครื่องจะเข้าสู่โหมดเล่นโดยอัตโนมัติ
- เฉพาะแผ่นซีดีเพลง (CD DA)เท่านั้นที่สามารถใช้กับการตัดข้อมูลได้
- ระหว่างขั้นตอนการตัดต่อซีดี อย่าใช้/กดปุ่มอื่น นอกจากปุ่ม CANCEL (ยกเลิก)
- ในกรณกลับไปยังหน้าจอ CD DA ให้กดปุ่ม RETURN (กลับ) อีกครั้ง

การเล่น CD ภาพ

1. เลือกโฟลเดอร์ที่ต้องการ
2. กดปุ่ม ▲/▼ เพื่อเลือกไฟล์ภาพในเมนูคลิก จากนั้นกดปุ่ม **ENTER**

หมายเหตุ

- กดปุ่ม STOP เพื่อกลับไปยังเมนูคลิก
- ในขณะที่กำลังเล่น CD ภาพของโกดัก เครื่องเล่น จะแสดงภาพโดยตรง โดยไม่แสดงเมนูคลิก

Rotation (การหมุน)

- แต่ละครั้งที่กดปุ่ม ◀/▶ ภาพจะหมุนตามเข็มนาฬิกาไป 90 องศา
- แต่ละครั้งที่กดปุ่ม ▲ ภาพจะกลับไปยังโอละพอ เพื่อแสดงภาพกระจก
- แต่ละครั้งที่กดปุ่ม ▼ ภาพจะกลับไปยังด้านขวาเพื่อแสดงภาพกระจก

Slide Show (สไลด์โชว์)

- เมื่อกดปุ่ม Play (เล่น) ที่ไฟล์ Jpeg การแสดงผลจะเป็น โหมดเต็มจอและแสดงสไลด์โชว์โดยอัตโนมัติ

ZOOM

- ต้องกดปุ่มขยาย กดปุ่ม ENTER แต่ละครั้งที่กด ENTER ถูกกด ภาพจะถูกขยายไปจนถึงระดับ : 100%, 125%, 150%, 200%.

หมายเหตุ

- ขึ้นอยู่กับขนาดของไฟล์ ระยะเวลาในการแสดง ภาพแต่ละภาพอาจแตกต่างจากช่วงเวลาที่ตั้งไว้
- ถ้าคุณไม่กดปุ่มใดๆ สไลด์โชว์จะเริ่มโดยอัตโนมัติ ในเวลา 10 วินาทีตามค่าเริ่มต้น

แผ่นดิสก์ JPEG บน CD-R

- เฉพาะไฟล์ที่มีนามสกุล ".jpg" และ "JPG" เท่านั้นที่สามารถเล่นได้
- ถ้าไม่ได้บีบอัดแผ่นดิสก์ จะใช้เวลานานขึ้นในการเริ่มเล่น และไฟล์ ที่บันทึกไว้ทุกไฟล์อาจไม่สามารถเล่นได้
- เฉพาะแผ่นดิสก์ CD-R ที่มีไฟล์ JPEG ในรูปแบบ ISO 9660 หรือ Joliet เท่านั้นที่สามารถเล่นได้
- ชื่อของไฟล์ JPEG ไม่สามารถมีความยาวเกิน 8 ตัวอักษรและไม่ควรมีช่องว่าง หรือตัวอักษรพิเศษใดๆ บรรจุอยู่(. / = +).
- เฉพาะแผ่นดิสก์ที่มีการเขียนแบบมัลติเซสชันที่ต่อเนื่องกันเท่านั้น ที่สามารถเล่นได้สลับมีสลับส่วนว่างในแผ่นดิสก์มัลติเซสชัน แผ่นดิสก์จะเล่นได้จนถึงส่วนที่ว่างเท่านั้น
- CD หนึ่งแผ่นสามารถถ่ายภาพได้สูงสุดเพียง 500 ภาพเท่านั้น
- ในขณะที่กำลังเล่น CD ภาพของโกดัก เฉพาะไฟล์ JPEG ในโฟลเดอร์ภาพเท่านั้นที่สามารถเล่นได้
- CD ภาพของโกดัก: ไฟล์ JPEG ในโฟลเดอร์ภาพสามารถเล่นได้โดยอัตโนมัติ
- CD ภาพของโคนิกา: ถ้าคุณต้องการดูภาพ ให้เลือกไฟล์ JPEG ในเมนูคลิก
- CD ภาพของฟูจิ: ถ้าคุณต้องการดูภาพ ให้เลือกไฟล์ JPEG ในเมนูคลิก
- CD ภาพของ QSS: เครื่องเล่นอาจไม่สามารถเล่น CD ภาพของ QSS ได้
- ถ้าจำนวนไฟล์ในแผ่นดิสก์ 1 แผ่นมีมากกว่า 500 ไฟล์ เครื่องเล่นจะเล่นไฟล์ JPEG ได้เพียง 500 ไฟล์เท่านั้น
- ถ้าจำนวนไฟล์ในแผ่นดิสก์ 1 แผ่นมีมากกว่า 500 ไฟล์ เครื่องเล่นจะเล่นไฟล์ JPEG ในโฟลเดอร์ได้เพียง 500 ไฟล์เท่านั้น

ฟังก์ชันคาราโอเกะ

ฟังก์ชัน คาราโอเกะ

ลำดับการทำงาน (เฉพาะซีดีเพลง DVD-C450K, DVD-C350K)

1. ต่อช่องเสียงสัญญาณเสียงออกผสมไปยังโทรทัศน์ หรือแอมป์ลิฟาย
2. ต่อไมโครโฟนเข้ากับแจ็คไมโครโฟน เมื่อ MIC เชื่อมต่อแล้ว ฟังก์ชัน karaoke <คาราโอเก> ก็สามารถใช้งานได้

ระดับเสียงไมโครโฟน / การควบคุมคีย์

1. เล่นแผ่นดิสก์คาราโอเกะที่บรรจุเพลงที่ต้องการ
 - กดปุ่ม KARAOKE เพื่อเลือก ไมโครโฟน จากนั้นกดปุ่ม KARAOKE เพื่อเลือก keycon.
2. กดปุ่ม ◀/▶ เพื่อเลือกการตั้งค่าที่ต้องการ

หมายเหตุ

- ถ้าคุณได้ยินเสียงพิคแน็ค (เสียงแหลม หรือเสียงหอน) ในขณะที่ใช้คุณสมบัติคาราโอเกะให้ย้ายไมโครโฟนออกจากทิศทางของลำโพง หรือลดระดับเสียงของไมโครโฟน หรือลำโพงลง
- ในขณะที่เล่นแผ่นดิสก์ MP3, WMA, DTS และ LPCM ฟังก์ชันคาราโอเกะจะไม่ทำงาน
- เมื่อไมโครโฟนต่ออยู่ สัญญาณดิจิตอลอาจจะไม่ทำงาน
- สัญญาณเสียงไมโครโฟนออก จะมาจากลำโพงเสียงอนาล็อกเท่านั้น

การเปลี่ยนเมนูการตั้งค่า

การใช้เมนูการตั้งค่า

เมนู Setup ช่วยให้คุณปรับแต่งเครื่องเล่น DVD ของคุณ โดยคุณสามารถเลือกภาษาที่ต้องการใช้, ตั้งค่าระดับการควบคุมโดยผู้ปกครอง หรือแม้แต่ปรับเครื่องเล่นให้ตรงกับชนิดของหน้าจอโทรทัศน์ของคุณ

1. ในขณะที่เครื่องเล่นอยู่ในโหมดหยุด กดปุ่ม MENU บนรีโมทคอนโทรล กดปุ่ม ◀/▶ เพื่อเลือก Setup <การตั้งค่า> จากนั้นกดปุ่ม ▼ หรือ ENTER
2. กดปุ่ม ▲/▼ เพื่อเข้าไปยังการทำให้หน้าจอการตั้งคุณสมบัติต่างๆ กดปุ่ม ► หรือ ENTER เพื่อเข้าไปยังคุณสมบัติย่อย
3. ในการทำให้หน้าจอการตั้งค่าหายไป ให้กดปุ่ม MENU อีกครั้ง

หมายเหตุ

ขึ้นอยู่กับแผ่นดิสก์ การเลือก Setup Menu บางอย่างอาจไม่ทำงาน

การตั้งค่าคุณสมบัติของภาษา

ถ้าคุณตั้งค่าเมนูของเครื่องเล่น เมนูดิสก์ภาษาของเสียงพากย์และคำบรรยายลงหน้า การตั้งค่าเหล่านี้จะถูกเรียกใช้โดยอัตโนมัติทุกครั้งที่คุณชมภาพยนตร์.

การใช้ภาษาของ เมนูคำสั่ง <Player Menu>

1. ในขณะที่เครื่องอยู่ในโหมดหยุด ให้กดปุ่ม MENU
2. กดปุ่ม ◀/▶ เพื่อเลือก Language Setup Page <ตั้งค่าภาษาหน้า> จากนั้นกดปุ่ม ▼ หรือ ENTER
3. กดปุ่ม ▲/▼ เพื่อเลือกภาษาที่ต้องการ จากนั้นกดปุ่ม ► หรือ ENTER

หมายเหตุ

- ภาษาจะถูกเลือก และหน้าจอจะกลับไปยังเมนู ตั้งค่าภาษา <Language Setup>
- ในการทำให้เมนูการตั้งค่าหายไป ให้กดปุ่ม MENU
- ภาษาที่เลือกไม่ได้บันทึกอยู่บนแผ่นดิสก์ภาษาที่บันทึกไว้ครั้งแรกก็จะถูกเลือก
- เลือก "ต้นฉบับ <Original>" ถ้าคุณต้องการให้ภาษา เริ่มต้นของชาวคนแรกเป็นภาษาต้นฉบับที่แผ่นดิสก์บันทึกไว้
- เลือก "อัตโนมัติ <Automatic>" ถ้าคุณต้องการให้ภาษา สอดคล้องกับที่เลือกเป็นภาษาสำหรับคำบรรยายเป็นภาษา เสียงพากย์

การตั้งค่าตัวกของเสียง

ตัวเลือกของเสียง อนุญาตให้คุณตั้งค่าอุปกรณ์เสียง และสถานะของเสียงให้ อดคล้องกับระบบเสียงที่กำลังใช้งานอยู่

1. ในขณะที่เครื่องอยู่ในโหมดหยุด ให้กดปุ่ม MENU
2. กดปุ่ม ◀/▶ เพื่อเลือก **Audio Setup Page** <ตั้งค่าเสียงหน้า> จากน กดปุ่ม ▼ หรือ ENTER
3. กดปุ่ม ▲/▼ เพื่อเลือกรายการที่ต้องการ จากนั้นกดปุ่ม ► หรือ ENTER.

หมายเหตุ

แม้ว่า เมื่อ PCM Down sampling ถูกตั้งค่าเป็น Off

- แผ่นดิสก์บางแผ่นจะถูกลดแซมเปิลเสียงลงผ่าน 5.1 ซุปเปอร์ออกดิจิตอล
- ในการทำให้เมนู Setup หายไป ให้กดปุ่ม MENU
- เมื่อคุณเล่นแผ่นดิสก์ที่มีระบบเสียงแบบ DTS จะ ไม่มีสัญญาณ เสียงอนาล็อกออก

ผลิตภัณฑ์การอนุญาตจาก Dolby Laboratories "Dolby" และสัญลักษณ์ D คือ
เป็นเครื่องหมายการค้าของ Dolby Laboratories "DTS" และ "DTS Digital Out"
เป็นเครื่องหมายการค้าของ Digital Theater Systems, Inc.

การตั้งค่าตัวเลือกการแสดงผล

ตัวเลือกของการแสดงผล ใช้เพื่อให้คุณตั้งค่าฟังก์ชันด้าน ภาพแบบต่างๆ ของเครื่องเล่น

1. ในขณะที่เครื่องอยู่ในโหมดหยุด ให้กดปุ่ม MENU
2. กดปุ่ม ◀/▶ เพื่อเลือก **Display Setup Page** <ตั้งค่าจอภาพหน้า> จากน กดปุ่ม ▼ หรือ ENTER
3. กดปุ่ม ▲/▼ เพื่อเลือกรายการที่ต้องการ จากนั้นกดปุ่ม ► หรือ ENTER

- คู่มือผู้ใช้โทรทัศน์ของคุณ เพื่อหาว่าโทรทัศน์ของคุณสนับสนุนระบบโปรเกรสซีฟสแกนหรือไม่ ถ้ามีการสนับสนุนโปรเกรสซีฟสแกน ให้ทำตามคำแนะนำในการตั้งค่าโปรเกรสซีฟสแกนของคุณ
- ใช้โทรทัศน์ในระบบเมนูของโทรทัศน์
- ถ้าไม่ได้ตั้งค่า Video Output <วิดีโอเอาต์พุต>อย่างถูกต้อง หน้าจออาจถูกบล็อกได้
- เมื่อความละเอียดถูกเปลี่ยนในระหว่างที่เล่น อาจใช้ เวลาสองถึงสามวินาทีเพื่อให้ภาพปกติปรากฏขึ้น

การตั้งค่าการควบคุมโดยผู้ปกครอง

ฟังก์ชันการควบคุมโดยผู้ปกครองทำงานร่วมกับแผ่น DVD ที่มีการกำหนดระดับของภาพยนตร์เอาไว้ซึ่งช่วยให้คุณสามารถควบคุมชนิดของ DVD ที่ครอบครัวของคุณจะรับชมได้ มีระดับของภาพยนตร์ทั้งหมด 8 ระดับบนแผ่นดิสก์

การตั้งค่าภาพยนตร์ / การเปลี่ยนรหัสผ่าน

1. ในขณะที่เครื่องอยู่ในโหมดหยุด ให้กดปุ่ม MENU
2. กดปุ่ม ◀/▶ เพื่อเลือก **Parental Page** <เรทภาพยนตร์หน้า> จากน กดปุ่ม ▼ หรือ ENTER
3. กดปุ่ม ▲/▼ เพื่อเลือก **Parental** <เรทภาพยนตร์>/**Password** <รหัสผ่าน> จากน กดปุ่ม ► หรือ ENTER.
4. กดปุ่ม ▲/▼ เพื่อเลือกระดับ ของภาพยนตร์ที่คุณต้องการ หรือ ENTER e.g) เช่น การตั้งค่าให้เป็น Kids Safe.
5. ป้อนรหัสผ่านของคุณ ถ้านี่คือครั้งแรก พิมพ์ 0000. จากนั้นพิมพ์รหัสผ่านใหม่ รหัสผ่านใหม่ต้องเป็นเลขอื่นที่ไม่ใช่ 0000 เพื่อเปิดใช้ฟังก์ชันของผู้ปกครอง ป้อนรหัสผ่านของคุณเพื่อป้อนรหัสผ่านใหม่ของคุณ

หมายเหตุ

- ① ป้องกันเด็ก(KID SAFE)
- ② G (ผู้ชมทั่วไป) : เหมาะกับผู้ชมทุกวัย
- ③ PG (แนะนำผู้ใหญ่ในการซื้อของของผู้ปกครอง) : เนื้อหาบางอย่างอาจไม่เหมาะสำหรับเด็ก.
- ④ PG 13 (ผู้ปกครองควรระวังอย่างยิ่ง) : เนื้อหาบางอย่างอาจไม่เหมาะสมสำหรับเด็กอายุต่ำกว่า 13
- ⑤ PGR (ควรอยู่ในการซื้อและผู้ปกครอง) : อาจไม่มีเนื้อหาที่ไม่เหมาะสมกับเด็กและเยาวชน แต่ขอแนะนำให้ผู้ชมใช้วิจารณญาณในการชม และผู้ปกครองควรกำกับดูแลผู้ชมที่เป็นเยาวชน.
- ⑥ R (จำกัด) : ผู้ชมที่อายุต่ำกว่า 17 ต้องมีผู้ใหญ่คอยดูด้วย
- ⑦ NC17 (NC-17) : ห้ามดูหากอายุตั้งแต่ 17 ปีลงไป.
- ⑧ ผู้ใหญ่ (ADULT)

ถ้าคุณลืมรหัสผ่านของคุณ ให้อ่านหัวข้อ "ลืมรหัสผ่าน" ในคู่มือการแก้ไขปัญหา

การตั้งค่า DivX

ตัวเลือกของการแสดงผล ใช้เพื่อให้คุณตั้งค่าฟังก์ชันด้าน ภาพแบบต่างๆ ของเครื่องเล่น

1. ในขณะที่เครื่องอยู่ในโหมดหยุด ให้กดปุ่ม MENU
2. กดปุ่ม ◀/▶ เพื่อเลือก **DivX Page** (DivX หน้า) จากน กดปุ่ม ▼ หรือ ENTER
3. กดปุ่ม ▲/▼ เพื่อเลือกรายการที่ต้องการ จากนั้นกดปุ่ม ► หรือ ENTER

หมายเหตุ

- กด OK (ตกลง) เพื่อดูหมายเลขลงทะเบียน DivX

การแก้ไขปัญหา

ก่อนที่จะนำเครื่อง ไปรับบริการซ่อมแซม (แก้ไขปัญหา) โปรดตรวจสอบสิ่งต่อไปนี้ก่อน.

ปัญหา	การดำเนินการ
หน้าจอถูกล็อก	• กดปุ่ม (■ / ▲) เป็นเวลามากกว่า 5 วินาทีเมื่อไม่มีแผ่นดิสก์อยู่ในเครื่อง การตั้งค่าทั้งหมดจะถูกเรียกคืนกลับเป็นค่าจากโรงงาน
ลืมรหัสผ่าน	• กดปุ่ม (■ / ▲) เป็นเวลามากกว่า 5 วินาทีเมื่อไม่มีแผ่นดิสก์อยู่ในเครื่อง การตั้งค่าทั้งหมดรวมถึงรหัสผ่านจะถูกเรียกคืนกลับเป็นค่าจากโรงงาน อย่างไรก็ตามการเช่นนี้ ยกเว้นในกรณีที่เป็นจริงๆ เท่านั้น

ข้อมูลจำเพาะ

ทั่วไป	ความต้องการพลังงาน	AC 110-240 V ~ 50/60 Hz
	น้ำหนัก	DVD-C450K, C450 : 1.5 กก. DVD-C360,C350K, C350 : 1.2 กก.
	ความสิ้นเปลืองพลังงาน	6W
	ขนาด	DVD-C450K, C450 : 430mm. (ก)X 207mm. (ส) X 42mm. (ส) DVD-C360,C350K, C350 : 360mm. (ก) X 207mm.(ส) X 42mm. (ส)
	ช่วงอุณหภูมิขณะทำงาน	+5°C ถึง +35°C
	ช่วงความชื้นขณะทำงาน	10 % ถึง 75 %
สัญญาณภาพออก	คอมโพเนนต์วิดีโอ	Y : 1.0 Vp-p (โหลด 75 Ω) Pr : 0.70 Vp-p (โหลด 75 Ω) Pb : 0.70 Vp-p (โหลด 75 Ω)
สัญญาณเสียงออก	*ความถี่การตอบสนอง	20Hz~20kHz

Memo

Memo

Memo

ติดต่อซัมซุงเว็บไซต์

ติดต่อซัมซุงเว็บไซต์ หากมีคำแนะนำหรือข้อสงสัยเกี่ยวกับผลิตภัณฑ์ซัมซุง ติดต่อสอบถามได้ที่ SAMSUNG customer care center

Region	Area	Contact Center ☎	Web Site
North America	Canada	1-800-SAMSUNG (726-7864)	www.samsung.com/ca
	Mexico	01-800-SAMSUNG (726-7864)	www.samsung.com/mx
	U.S.A	1-800-SAMSUNG (726-7864)	www.samsung.com/us
	Argentina	0800-333-3733	www.samsung.com/ar
	Brazil	0800-124-421 4004-0000	www.samsung.com/br
Latin America	Chile	800-SAMSUNG (726-7864)	www.samsung.com/cl
	Nicaragua	00-1800-5077267	www.samsung.com/latin
	Honduras	800-7919267	www.samsung.com/latin
	Costa Rica	0-800-507-7267	www.samsung.com/latin
	Ecuador	1-800-10-7267	www.samsung.com/latin
	El Salvador	800-6225	www.samsung.com/latin
	Guatemala	1-800-299-0013	www.samsung.com/latin
	Jamaica	1-800-234-7267	www.samsung.com/latin
	Panama	800-7267	www.samsung.com/latin
	Puerto Rico	1-800-682-3180	www.samsung.com/latin
	Rep. Dominica	1-800-751-2676	www.samsung.com/latin
	Trinidad & Tobago	1-800-SAMSUNG (726-7864)	www.samsung.com/latin
Europe	Venezuela	0-800-100-5303	www.samsung.com/latin
	Colombia	01-8000112112	www.samsung.com.co
	Belgium	02 201 2418	www.samsung.com/be (Dutch)
	Czech Republic	800-SAMSUNG (800-726786)	www.samsung.com/be fr (French)
	Denmark	8-SAMSUNG (7267864)	www.samsung.com/cz
	Finland	30-6227 515	www.samsung.com/dk
	France	01 4863 0000	www.samsung.com/fr
	Germany	01800-SAMSUNG (726-7864 € 0,14/Min)	www.samsung.de
	Hungary	06-80-SAMSUNG (726-7864)	www.samsung.com/hu
	Italy	800-SAMSUNG (726-7864)	www.samsung.com/it
	Luxemburg	02 261 03 710	www.samsung.com/lu
	Netherlands	0800-SAMSUNG (0800-7267864) (€ 0,10/Min)	www.samsung.com/nl
	Norway	3-SAMSUNG (7267864)	www.samsung.com/no
	Poland	0 801 1SAMSUNG (172678), 022-607-93-33	www.samsung.com/pl
	Portugal	80820-SAMSUNG (726-7864)	www.samsung.com/pt
	Slovakia	0800-SAMSUNG (726-7864)	www.samsung.com/sk
	Spain	802-1-SAMSUNG (02 172 678)	www.samsung.com/es
	Sweden	0771 726 7864 (SAMSUNG)	www.samsung.com/se
	U.K	0845 SAMSUNG (7267864)	www.samsung.com/uk
	Eire	0818 717 100	www.samsung.com/ie
CIS	Austria	0810-SAMSUNG (7267864, € 0.07/min)	www.samsung.com/at
	Switzerland	0848-SAMSUNG (7267864, CHF 0.08/min)	www.samsung.com/ch
			www.samsung.com/ch_fr (French)
	Russia	8-800-555-55-55	www.samsung.ru
	Kazakhstan	8-10-800-500-55-500	www.samsung.com/kz_ru
	Uzbekistan	8-10-800-500-55-500	www.samsung.com/kz_ru
	Kyrgyzstan	00-800-500-55-500	
	Tadjikistan	8-10-800-500-55-500	
	Ukraine	8-800-502-0000	www.samsung.ua
			www.samsung.com/ua_ru
	Belarus	810-800-500-55-500	
	Moldova	00-800-500-55-500	
	Lithuania	8-800-77777	www.samsung.com/lt
	Latvia	800-7267	www.samsung.com/lv
	Estonia	800-7267	www.samsung.com/ee
Asia Pacific	Australia	1300 362 603	www.samsung.com/au
	New Zealand	0800 SAMSUNG (0800 726 786)	www.samsung.com/nz
	China	400-810-5858, 010-6475 1880	www.samsung.com/cn
	Hong Kong	3698-4698	www.samsung.com/hk
			www.samsung.com/hk_erv
	India	3030 8282; 1800 110011, 1800 3000 8282	www.samsung.com/in
	Indonesia	0800-112-8888	www.samsung.com/id
	Japan	0120-327-527	www.samsung.com/jp
	Malaysia	1800-88-9999	www.samsung.com/my
	Philippines	1-800-10-SAMSUNG (726-7864), 1-800-3-SAMSUNG (726-7864), 1-800-6-SAMSUNG (726-7864), 02-5805777	www.samsung.com/ph
	Singapore	1800-SAMSUNG (726-7864)	www.samsung.com/sg
	Thailand	1800-29-3232, 02-689-3232	www.samsung.com/th
	Taiwan	0800-329-999	www.samsung.com/tw
	Vietnam	1 800 588 889	www.samsung.com/vn
	Turkey	444 77 11	www.samsung.com/tr
Middle East & Africa	South Africa	0860-SAMSUNG (726-7864)	www.samsung.com/za
	U.A.E	800-SAMSUNG (726-7864), 8000-4726	www.samsung.com/ae



SAMSUNG

DVD-C450K
DVD-C450
DVD-C360
DVD-C350K
DVD-C350

DVD Player

User Manual

imagine the possibilities

Thank you for purchasing this Samsung product.

To receive more complete service, please register your product at

www.samsung.com/global/register



AK68-01920A



Precautions

1. Setting up

- Refer to the identification label located on the rear of your player for its proper operating voltage.
- Install your player in a cabinet with adequate ventilation holes. (7~10cm) Do not block ventilation holes on any of the components for air circulation.
- Do not push the disc tray in by hand.
- Do not stack components.
- Be sure to turn all components off before moving the player.
- Before connecting other components to this player, be sure to turn them off.
- Be sure to remove the disc and turn off the player after use, especially if you are not going to use it for a long time.
- The mains plug is used as a disconnect device and shall stay readily operable at any time.

2. For your safety

- This product utilizes a laser. Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.
- Do not open covers and do not repair yourself. Refer servicing to qualified personnel.

3. Caution

- Your player is not intended for industrial use but for domestic purposes. Use of this product is for personal use only.
- Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.
- Exterior influences such as lightning and static electricity can affect normal operation of this player. If this occurs, turn the player off and on again with the POWER button, or disconnect and then reconnect the AC power cord to the AC power outlet. The player will operate normally.
- When condensation forms inside the player due to sharp changes in temperature, the

player may not operate correctly. If this occurs, leave the player at room temperature until the inside of the player becomes dry and operational.

4. Disc

- Do not use record-cleaning sprays, benzene, thinner, or other volatile solvents that may cause damage to the disc surface.
- Do not touch the disc's signal surface. Hold by the edges or by one edge and the hole in the center.
- Wipe the dirt away gently; never wipe a cloth back and forth over the disc.

5. Environmental info

- The battery used in this product contains chemicals that are harmful to the environment.
- So, dispose of batteries in the proper manner, according to federal, state, and local regulations.

The product unit accompanying this user manual is licensed under certain intellectual property rights of certain third parties. This license is limited to private non-commercial use by end-user consumers for licensed contents. No rights are granted for commercial use. The license does not cover any product unit other than this product unit and the license does not extend to any unlicensed product unit or process conforming to ISO/OUR 11172-3 or ISO/OUR 13818-3 used or sold in combination with this product unit. The license only covers the use of this product unit to encode and/or decode audio files conforming to the ISO/OUR 11172-3 or ISO/OUR 13818-3. No rights are granted under this license for product features or functions that do not conform to the ISO/OUR 11172-3 or ISO/OUR 13818-3.

CAUTION: USE OF ANY CONTROLS, ADJUSTMENTS, OR PROCEDURES OTHER THAN SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

Contents

Precautions	2	Clips Menu for MP3/WMA/JPEG/MPEG4	
Setup		CD Audio	8
General Features	2	Folder Selection	8
Description	3	MP3/WMA/CD Audio Playback	8
Tour of the Remote Control	4	MPEG4 Playback	9
Connections		Playing media files Using the USB Host Feature (Only DVD-C450K,C450,C360)	9
Choosing a Connection	5	CD Ripping (Only DVD-C450K,C450,C360)	10
Basic Functions		Picture CD Playback	10
Playing a Disc	6	Karaoke Function	
Using the Search and Skip Functions	6	Karaoke Function (Only DVD-C450K,C350K)	11
Using the Display Function	6	Changing Setup Menu	
Using the Disc Menu and Title Menu	6	Using the Setup Menu	11
Repeat Play	6	Setting Up the Language Features	11
Slow Play	7	Setting Up the Audio Options	11
Advanced Functions		Setting Up the Display Options	11
Adjusting the Aspect Ratio (EZ View)	7	Setting Up the Parental Control	12
Selecting the Audio Language	7	Setting Up the DivX	12
Selecting the Subtitle Language	7	Reference	
Changing the Camera Angle	7	Troubleshooting	12
Using the Bookmark Function	7	Specifications	12
Using the Zoom Function	8		

Setup

General Features

Excellent Sound

Dolby Digital, a technology developed by Dolby Laboratories, provides crystal clear sound reproduction.

Screen

Both regular and widescreen(16:9) pictures can be viewed.

Slow Motion

An important scene can be viewed in slow motion.

Parental Control (DVD)

The parental control allows users to set the level necessary to prohibit children from viewing harmful movies such as those with violence, adult subject matter, etc.

Various On-Screen Menu Functions

You can select various languages (Audio/Subtitle) and screen angles while enjoying movies.

Progressive Scan

Progressive scanning creates an improved picture

with double the scan lines of a conventional interlaced picture.

EZ VIEW (DVD)

Easy View enables picture adjustment to match your TV's screen size (16:9 or 4:3).

Digital Photo Viewer (JPEG)

You can view Digital Photos on your TV.

Repeat

You can repeat a song or movie simply by pressing the REPEAT button.

MP3/WMA

This unit can play discs created from MP3/WMA files.

MPEG4

This unit can play MPEG4 formats within an avi file.

CD Ripping (Only DVD-C450K,C450,C360)

This feature lets you copy audio files from discs to USB device into MP3 format. (only audio CD (CD DA)).








Note

- Discs which cannot be played with this player.
- DVD-ROM • DVD-RM
- CD-ROM • CDV
- CDI • CVD
- CDGs play audio only, not graphics.
- Ability to play back may depend on recording conditions.
- DVD-R, +R
- CD-RW
- DVD+RW, -RW (V mode)
- The unit may not play certain CD-R, CD-RW and DVD-R due to the disc type or record ing conditions.

COPY PROTECTION

Many DVD discs are encoded with copy protec- tion. Because of this, you should only connect your DVD player directly to your TV, not to a VCR. Connecting to a VCR results in a distorted picture from copy-protected DVD discs. This product incorporates copyright protection technology that is protected by methods claims of certain U.S. patents and other intellectual

Disc Markings

	Play Region Number
	PAL broadcast system in U.K, France, Germany, etc.
	Dolby Digital disc
	Stereo disc
	Digital Audio disc
	DTS disc
	MP3 disc

property rights owned by Rovi Corporation and other rights owners. Use of this copyright protec- tion technology must be authorized by Rovi Corporation, and is intended for home and other limited viewing uses only unless otherwise autho- rized by Rovi Corporation. Reverse engineering or disassembly is prohibited.

PROGRESSIVE SCAN OUTPUTS (576p)

"CONSUMERS SHOULD NOTE THAT NOT ALL HIGH DEFINITION TELEVISION SETS ARE FULLY COMPATIBLE WITH THIS PRODUCT AND MAY CAUSE ARTIFACTS TO BE DISPLAYED IN THE PICTURE, IN CASE OF 576 PROGRESSIVE SCAN PICTURE PROBLEMS, IT IS RECOMMENDED THAT THE USER SWITCH THE CONNECTION TO THE 'STANDARD DEFINITION' OUTPUT. IF THERE ARE QUESTIONS REGARDING YOUR TV SET COMPATIBILITY WITH THIS MODEL 576p DVD PLAYER, PLEASE CONTACT SAMSUNG'S CUSTOMER SERVICE CENTER."

Region Number

Both the DVD player and the discs are coded by region. These regional codes must match in order for the disc to play. If the codes do not match, the disc will not play.

The Region Number for this player is described on the rear panel of the player.

DivX Certification

 
DivX, DivX Certified, and associated logos are trade- marks of DivXNetworks, Inc and are used under license. DivX Certified to play DivX video.




Descriptions

Front Panel Controls


DVD-C450K




DVD-C450

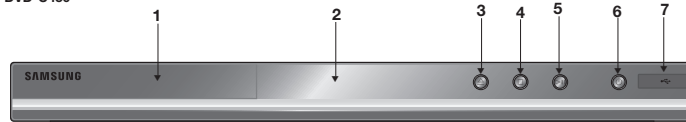 


DVD-C360

 

DVD-C350K

 

DVD-C350

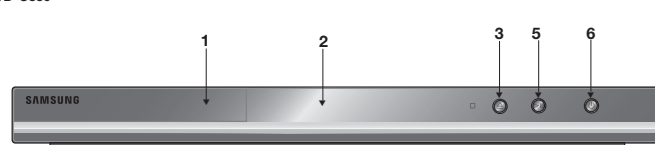 

1. DISC TRAY

Place the disc here.

2. DISPLAY

Operation indicators are displayed here.

3. OPEN/CLOSE/STOP (▲)

Press to open and close the disc tray

4. STOP (■)

(Only DVD-C450K,C450)

Stop disc play.

5. PLAY/PAUSE (▶|)

Play or pause the disc / Stops Disc Play

6. Power ON/OFF (⏻)

Turn On/Off the DVD Player

7. USB HOST

(Only DVD-C450K,C450,C360)

Connect digital still camera, MP3 player, memory stick, Card reader, or another removable storage devices.

8. MIC 1/2

(Only DVD-C450K,C350K)

Connect Microphone for karaoke functions.

 
9. MICROPHONE VOLUME

(Only DVD-C450K)

Use to adjust microphone volume level. Use the button by pressing it. Turn it to the left or right to control the volume.

Tour of the Remote Control

DVD-C450K
DVD-C450
DVD-C360

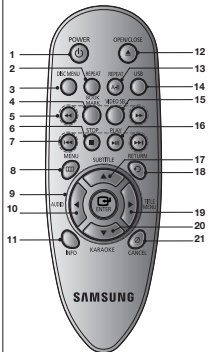

1. DVD POWER Button

Turns the power on or off.

2. REPEAT Button

Allows you to repeat play a title, chapter, track, or disc.

3. DISC MENU Button

Brings up the Disc menu.

4. BOOKMARK

Quickly find bookmark sections of a DVD.

5. SEARCH Buttons (◀▶)

Allow you to search forward/back ward through a disc.

6. STOP Button (■)

7. SKIP Buttons (◀▶)

Use to skip the title, chapter or track

8. MENU Button

Brings up the DVD player's menu.

9. ENTER / ▲, ▼, ◀, ▶ Buttons

This button functions as a toggle switch.

10. AUDIO Button (◀)

Use this button to access various audio functions on a disc.

11. INFO Button

Displays the current disc mode.

12. OPEN/CLOSE (▲) Button

To open and close the disc tray.

13. REPEAT A-B Button

Allows you to repeat A-B disc.

14. USB Button

15. VIDEO SEL. Button
Selects video output formats.

16. PLAY/PAUSE Button (▶|)

Begin/Pause disc play.

17. SUBTITLE Button (▲)

18. RETURN Button

Returns to a previous menu.

19. TITLE MENU Button (▶)

Brings up the Title menu.

 
20. KARAOKE Button (▼) (Only DVD-C450K)

Use to begin Karaoke functions.

21. CANCEL Button

Use to remove menus or status displays from the screen.

DVD-C350K
DVD-C350

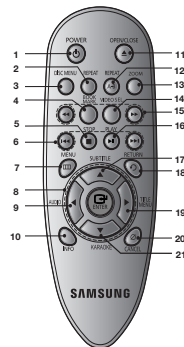

1. DVD POWER Button

Turns the power on or off.

2. REPEAT Button

Allows you to repeat play a title, chapter, track, or disc.

3. DISC MENU Button

Brings up the Disc menu.

4. BOOKMARK

Quickly find bookmark sections of a DVD.

5. STOP Button (■)

6. SKIP Buttons (◀▶)

Use to skip the title, chapter or track

7. MENU Button

Brings up the DVD player's menu.

8. ENTER / ▲, ▼, ◀, ▶ Buttons

This button functions as a toggle switch.

9. AUDIO Button (◀)

Use this button to access various audio functions on a disc.

10. INFO Button

Displays the current disc mode.

11. OPEN/CLOSE (▲) Button

To open and close the disc tray.

12. REPEAT A-B Button

Allows you to repeat A-B disc.

13. ZOOM Button

Enlarges the DVD Picture.

14. VIDEO SEL. Button

Selects video output for mats.

15. SEARCH Buttons (◀▶)

Allow you to search forward/back ward through a disc.

16. PLAY/PAUSE Button (▶|)

Begin/Pause disc play.

17. SUBTITLE Button (▲)

18. RETURN Button

Returns to a previous menu.

19. TITLE MENU Button (▶)

Brings up the Title menu.

20. CANCEL Button

Use to remove menus or status displays from the screen.

21. KARAOKE Button (▼)

(Only DVD-C350K)
Use to begin Karaoke functions.

Connections

Choosing a Connection

The following shows examples of connections commonly used to connect the DVD player with a TV and other components.

Before Connecting the DVD Player

- Always turn off the DVD player, TV, and other components before you connect or disconnect any cables.
- Refer to the user's manual of the additional components you are connecting for more information on those particular components.

A. Connecting to a TV (VIDEO CVBS)

- Using video/audio cables, connect the **VIDEO (yellow)/AUDIO (red and white) OUT** terminals on the rear of the DVD player to the **VIDEO (yellow)/AUDIO (red and white) IN** terminals of TV.
- Turn on the DVD player and TV.
- Press the input selector on your TV remote control until the Video signal from the DVD player appears on the TV screen.

Note

- **Noise may be generated if the audio cable is too close to the power cable.**
- If you want to connect to an Amplifier, please refer to the Amplifier connection page.
- The number and position of terminals can vary depending on your TV set. Please refer to the user's manual of the TV.
- If there is one audio input terminal on the TV, connect it to the [AUDIO OUT][left] (white) terminal of the DVD player.
- If you press the VIDEO SEL. button when DVD Player is in stop mode or no disc is inserted, the Video Output mode changes in the following sequence: (I-SCAN → P-SCAN).

B. Connection to an Audio System (2 Channel Amplifier, Dolby Digital, MPEG2 or DTS Amplifier)

- Using the audio cables, connect the **AUDIO (red and white) OUT** terminals on the rear of the DVD player to the **AUDIO (red and white) IN** terminals of the Amplifier.
 - If Using the video signal cable(s), connect the **VIDEO** terminals on the rear of the DVD player to the **VIDEO** terminal of your TV. If using a coaxial cable, connect the **DIGITAL AUDIO OUT (COAXIAL)** terminal on the rear of the DVD player to the **DIGITAL AUDIO IN (COAXIAL)** terminal of the Amplifier.
 - Turn on the DVD player, TV, and Amplifier.
 - Press the input select button of the Amplifier to select **external input** in order to hear sound from the DVD player.
- Refer to your Amplifier's user manual to set the Amplifier's audio input.

 
D. Connections to a TV Interlace / Progressive

- Using component video cables, connect the **COMPONENT VIDEO OUT** terminal on the rear of the DVD player to the **COMPONENT IN** terminal of TV.
- Using the audio cables, connect the **AUDIO (red and white) OUT** terminals on the rear of the DVD player to the **AUDIO (red and white) IN** terminals of TV. Turn on the DVD player and TV.
- Press the input selector on your TV remote control until the Component signal from the DVD player appears on the TV screen.

- Set the Video Output to **I-SCAN/P-SCAN** in the Display Setup menu. You can use the **VIDEO SEL.** button to change the Video Output mode.

Note

- What is "Progressive Scan"? Progressive scan has twice as many scanning lines as the interlace output method has. Progressive scanning method can provide better and clearer picture quality.

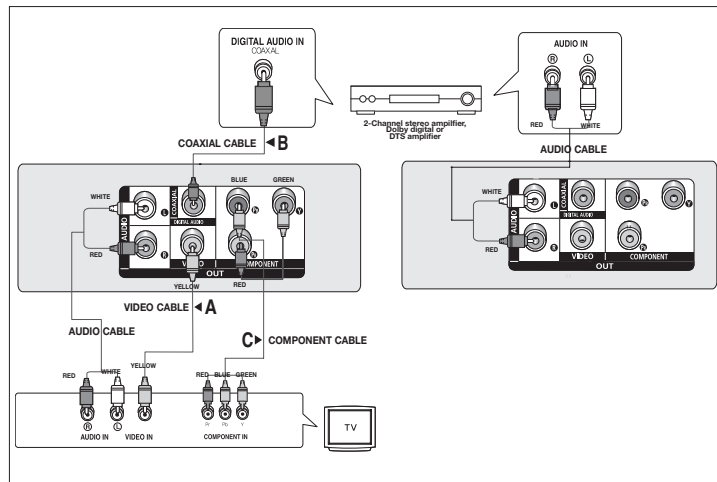

Basic functions

Playing a Disc

Before Play

- Turn on your TV and set it to the correct Video Input by pressing TV/VIDEO button on the TV remote control.
- If you connected an external Audio System, turn on your Audio System and set it to the correct Audio Input.

After plugging in the player, the first time you press the DVD **POWER** button, : If you want to select a language, press a **▲/▼** button then press **ENTER** (This screen will only appear when you plug in the player for the first time.) If the language for the startup screen is not set, the settings may change whenever you turn the power on or off. Therefore, make sure that you select the language you want to use. Once you select a menu language, you can change it by pressing the **■/▲** button on the front panel of the unit for more than 5 seconds with no disc in the unit. Then the **SELECT MENU LANGUAGE** window appears again where you can reset your preferred language.

Using the Search and Skip Functions

During play, you can search quickly through a chapter or track, and use the skip function to jump to the next selection.

Searching through a Chapter or Track

During play, press the **SEARCH** (**◀◀** or **▶▶**) button on the remote control for more than 1 second.

DVD	2X, 4X, 64X, 128X
VCD	4X, 8X
CD	2X, 4X, 8X

Note

- The speed marked in this function may be different from the actual playback speed.
- No sound is heard during search mode (Except CD).

Skipping Tracks






During play, press the **SKIP** (**◀◀** or **▶▶**) button.

- When playing a DVD, if you press the **SKIP** (**▶▶**) button, it moves to the next chapter. If you press the **SKIP** (**◀◀**) button, it moves to the beginning of the chapter. One more press makes it move to the beginning of the previous chapter.
- When playing a VCD or a CD, if you press the **SKIP** (**▶▶**) button, it moves to the next track. If you press the **SKIP** (**◀◀**) button, it moves to the beginning of the track. One more press makes it move to the beginning of the previous track.
- If a track exceeds 15 minutes when playing a VCD and you press the **▶▶** button, it moves forward 5 minutes. If you press the **◀◀** button, it moves backward 5 minutes.

Using the Display Function

When Playing a DVD/VCD/MPEG4

1. During play, press the **INFO** button on the remote control.
2. Press the **▲/▼** buttons to select the desired item.
 - When playing VCD, the Disc Menu may not work
3. Press the **◀/▶** buttons to make the desired setup and then press the **ENTER** button.
4. To make the screen disappear, press the **INFO** button again.

	To access the desired title when there is more than one in the disc. For example, if there is more than one movie on a DVD, each movie will be identified.
	Most DVD discs are recorded in chapters so that you can quickly find a specific passage.
	Allows playback of the film from a desired time. You must enter the starting time as a reference. The time search function does not operate on some disc.
	Refers to the subtitle languages available in the disc. You will be able to choose the subtitle languages or, if you prefer, turn them off from the screen. A DVD disc can have up to 32 different subtitles.
	Enter and press the ◀/▶ buttons to access the desired Audio, Angle, Bookmark, EZ View function and Zoom. Refers to the language of the film soundtrack. In the example, the soundtrack is played in English 5.1CH. A DVD disc can have up to eight different soundtracks. Some DVD discs are have more angle function from any picture. Bookmark function make you easily and quickly to find a track or chapter from DVD or CD. The EZ View function is use for changing the aspect ratio in DVD. The ZOOM function is use for Enlarge DVD Picture

Using the Disc and Title Menu

During stop mode of a DVD disc, press the **DISC MENU/TITLE MENU** button on the remote control.

Note

- The Disc Menu may not work. Depending on the disc.
- You can also use the Disc Menu, using the **DISC MENU** button on the remote control.
- Title Menu will only be displayed if there are at least two titles in the disc.

Repeat Play

Repeat the current track, chapter, title, a chosen section (A-B), or all of the disc.

When playing a DVD/VCD

Press the **REPEAT** buttons to select Chapter, Title, Track, Disc or Repeat : Off

- DVD repeats play by chapter or title, VCD repeat play by disc or track.
- Chapter : repeats the chapter that is playing.
- Title : repeats the title that is playing.
- Disc : repeats the disc that is playing.
- Repeat : Off
- Track : repeats the track that is playing.

Using the A-B Repeat function

1. Press the **REPEAT A-B** button on the remote control at the point where you want repeat play to start (A).
2. Press the **REPEAT A-B** button on the remote control at the point where you want the repeat play to stop (B).
3. To return to normal play, press the **REPEAT A-B** then press the **ENTER** button until the display shows Repeat : Off.

Note

- A-B REPEAT does not allow you to set point (B) directly after point (A) has been set.
- Depending on the disc, the Repeat function may not work.
- When playing VCD, the Disc Menu may not work.

Slow Play

This feature allows you to repeat scenes slowly containing sports, dancing, musical instruments being played etc., so you can study them more closely.

When playing a DVD/VCD

1. During play, press the **PLAY/PAUSE (▶||)** button.
2. Press the **SEARCH (▶▶)** button to choose the play speed between 1/2, 1/4, 1/8 and 1/16 of normal during PAUSE.

Advanced functions

Adjusting the Aspect Ratio (EZ View)

To play back using aspect ratio (DVD)

1. During play, press the **INFO** button on the remote control.
2. Press the **▲/▼** buttons to select **Shortcut**, then press the **ENTER** button
3. Press the **◀/▶** buttons to select **EZ View**, then press the **ENTER** button.
 - Each time you press the **◀/▶** button, the screen size changes. For graphics of the screen sizes and the sequence in which the sizes change, see the next column.

If you are using a 16:9 TV

For 16:9 aspect ratio discs

- WIDE SCREEN
- SCREEN FIT
- ZOOM FIT

For 4:3 aspect ratio discs

- Normal Wide
- SCREEN FIT
- ZOOM FIT
- VERTICAL FIT

If you are using a 4:3 TV

For 16:9 aspect ratio discs

- 4:3 Letter Box
- 4:3 Pan Scan
- SCREEN FIT
- ZOOM FIT

For 4:3 aspect ratio discs

- Normal Screen
- SCREEN FIT
- ZOOM FIT

Note

This function may behave differently depending on the type of disc.

Selecting the Audio Language

You can select a desired audio language quickly and easily with the AUDIO button.

Using the AUDIO/◀ button (DVD/VCD/MPEG4)

1. Press the AUDIO / **◀** button. The Audio changes when the button is pressed repeatedly. The audio languages are represented by abbreviations.
- Press the Audio / **◀** button on the remote control repeatedly to select the desired audio on MPEG4 then press the ENTER.

Note

- This function depends on audio languages are encoded on the disc and may not work.
- A DVD disc can contain up to 8 audio languages.

Selecting the Subtitle Language

You can select a desired subtitle quickly and easily with the SUBTITLE (▲) button.

Using the SUBTITLE / ▲ button (DVD/MPEG4)

1. Press the SUBTITLE / **▲** button. The subtitle languages are represented by abbreviations. The subtitle changes when the button is pressed repeatedly.
2. To remove the **SUBTITLE** icon, press the SUBTITLE / **▲** button.

Note

- You have to change the desired subtitle in the Disc Menu, according to discs. Press the DISC MENU button.
- This function depends on what subtitles are encoded on the disc and may not work on all DVDs.
- A DVD disc can contain up to 32 subtitle languages.

Changing the Camera Angle

When a DVD contains multiple angles of a particular scene, you can use the ANGLE function.

Using the ANGLE button (DVD)

If the disc contains multiple angles, the ANGLE appears on the screen.

1. During play, press the **INFO** button on the remote control.
2. Press the **▲/▼** buttons to select **Shortcut**, then press the **ENTER** button
3. Press the **◀/▶** buttons to select **Angle**, then press the **ENTER** button.
4. Press the **◀/▶** buttons on the remote control to select the desired angle.

Note

- If the disc has only one angle, this feature won't work. Currently, very few discs have this feature.
- Depending on the disc, these functions may not work.

Using the Bookmark Function

This feature lets you bookmark sections of a DVD or VCD (Menu Off mode) so you can quickly find them at a later time.

Using the Bookmark Function

1. During play, press the **INFO** button on the remote control.
2. Press the **▲/▼** buttons to select **Shortcut**, then press the **ENTER** button
3. Press the **◀/▶** buttons to select **Bookmark** then press the **ENTER** button.
4. When you reach the scene you want to mark, press the **ENTER** button. Up to 12 scenes may be marked at a time.

Note

- Depending on a disc, the Bookmark function may not work.
- When playing VCD, the Disc Menu may not work.

Recalling a Marked Scene

- 1~3. The first 1~3 steps are the same as those for "Using the Bookmark Function".
4. Press the **◀/▶** buttons to select the bookmark marked scene.
5. Press the PLAY/PAUSE (**▶||**) button to skip to the marked scene.

Clearing a Bookmark

- 1~3. The first 1~3 steps are the same as those for "Using the Bookmark Function".
4. Press the ◀/▶ buttons to select the bookmark number you want to delete.
5. Press the **CANCEL** button to delete a bookmark number.

Using the Zoom Function

- Using the Zoom Function (DVD-C350K, DVD-C350)

1. During play, press the **ZOOM** button on the remote control.

- Using the Zoom Function (DVD-C450K, DVD-C450, DVD-C360)

1. During play, press the **INFO** button on the remote control.
2. Press the ▲/▼ buttons to select **Shortcut**, then press the **ENTER** button.
3. Press the ◀/▶ buttons to select **Zoom**, then press the **ENTER** button.

- During DVD/VCD play, press ENTER to zoom in 2X/3X/4X/ Normal in order.

Clips Menu for MP3/WMA/JPEG/MPEG4/CD Audio

CD Audio or discs with MP3/WMA/JPEG contain individual songs and/or pictures that can be organized into folders as shown below. They are similar to how you use your computer to put files into different folders.

Open the disc tray. Place the disc on the tray. Close the tray. The tray closes and this screen display.



Folder Selections

- To select the Parent Folder

Press the RETURN button to go to parent folder, or press the ▲/▼ buttons to select ".." and press ENTER to go to the parent folder.

MP3/WMA/CD Audio Playback

1. Open the disc tray. Place the disc on the tray. Close the tray.
 - Only one kind of file is played back when a disc or a folder contains both MP3 and WMA files.
2. Press the ▲/▼ buttons to select a song file.
 - Press **ENTER** to begin playback of the song file.

Repeat/Random playback

Press the **REPEAT** button to change the playback mode. There are four modes, such as **Off**, **Track**, **Folder** and **Random**.

- Off: Normal Playback
 - Track: Repeats the current song file.
 - Folder: Repeats the song files which have the same extension in the current folder.
 - Random: Song files which have the same extension will be played in random order.
- To resume normal play, press the **CANCEL** button.

CD-R MP3/WMA file

When you record MP3 or WMA files on CD-R, please refer to the following.

- Your **MP3 or WMA files should be ISO 9660 or JOLIET format.**

ISO 9660 format and Joliet MP3 or WMA files are compatible with Microsoft's DOS and Windows, and with Apple's Mac. This format is the most widely used.

- When naming your **MP3 or WMA files, do not exceed 8 characters, and enter ".mp3, .wma" as the file extension.**

General name format : Title.mp3. or Title.wma. When composing your title, make sure that you use 8 characters or less, have no spaces in the name, and avoid the use of special characters including: (,/, \, =, +).

- Use a **decompression transfer rate of at least 128 Kbps when recording MP3 files.**

Sound quality with MP3 files basically depends on the rate of compression/ decompression you choose. Getting CD audio sound requires an analog/digital sampling rate, that is conversion to MP3 format, of at least 128 Kbps and up to 160 Kbps. However, choosing higher rates, like Kbps or more, only rarely give better sound quality. Conversely, files with decompression rates below 128 Kbps will not be played properly.

- Use a **decompression transfer rate of at least 64Kbps when recording WMA files.**

Sound quality with WMA files basically depends on the rate of compression/decompression you choose. Getting CD audio sound requires an analog/digital sampling rate, that is conversion to WMA format, of at least 64Kbps and up to Kbps. Conversely, files with decompression rates below 64Kbps or over Kbps will not be played properly.

- **Do not try recording copyright protected MP3 files.**

Certain "secured" files are encrypted and code protected to prevent illegal copying. These files are of the following types: Windows Media (registered trade mark of Microsoft Inc) and SDMI™ (registered trade mark of The SDMI Foundation). You cannot copy such files.

- **Important :**

The above recommendations cannot be taken as a guarantee that the DVD player will play MP3 recordings, or as an assurance of sound quality. You should note that certain technologies and methods for MP3 file recording on CD-Rs prevent optimal playback of these files on your DVD player (degraded sound quality and in some cases, inability of the player to read the files).

- This unit can play a maximum of 500 files and 500 folders per disc.

MPEG4 Playback

MPEG4 Play Function

MPEG4 is a compressed video format designed to deliver DVD quality video at lower data rates and smaller file sizes. Types of MPEG4 files are DivX or Xvid. These files have an .avi extension. AVI files are used to contain the audio and video data. This unit can only play AVI format files with the ".avi" extension.

1. Open the disc tray. Place the disc on the tray. Close the tray.
2. Press the **▲/▼** buttons to select an avi file (DivX/XviD) and then press **ENTER** button.

Repeat playback

Press the REPEAT button to change playback mode. There are 3 modes, such as Track, Folder and Off.

- Track : repeats the track that is playing.
- Folder : repeats the AVI files which have the same extension in the current folder.
- Off

MPEG4 Function Description

Function	Description
Skip (◀◀ or ▶▶)	During play, press the ◀◀ or ▶▶ button, it moves forward or backward 5 minutes.
Search (◀◀ or ▶▶)	During play, press the SEARCH (◀◀ or ▶▶) button and press again to search at a faster speed. Allows you to search at a faster speed in an AVI file. (2X, 4X, 8X)
Slow Motion Play	Allows you to search at a slower speed in an AVI file. (1/2, 1/4, 1/8, 1/16)

- These functions may not work depending on MPEG4 file.

CD-R AVI file

This unit can play the following video compression formats within the AVI file format:

- DivX 3.11 contents
- DivX 4 contents (Based on MPEG-4 Simple Profile)
- DivX 5 contents (MPEG-4 simple profile plus additional features such as bi-directional frames. Qpel and GMC are also supported.)
- Xvid MPEG-4 compliant Contents.

This unit supports all resolutions up to maximum below.

DivX5
720 x 480 @30fps 720 x 576 @25fps : Maximum bit rate :4Mbps

Note

- Some MPEG-4 files created on a personal computer may not be play back. That is why Codec Type, Version and Higher resolution over specification is not supported.
- This unit supports CD-R/RW written in MPEG4 in accordance with the "ISO9660 format".

Playing Media File Using the USB Host feature

(Only DVD-C450K,C450,C360)

You can enjoy the media files such as pictures, movies and tunes saved in an MP3 player, USB memory or digital camera in high audio by connecting the storage device to the USB port of the DVD Player.

Using the USB HOST feature

1. Connect the USB device to the USB port on the front of the unit.
2. Press the **▲/▼** buttons to select a file in USB. Press **ENTER** to Open file.

Note

- Each time the USB button on the remote control is pressed, a frame of the USB device selection will appear.
- "USB" appears on the display screen.
- When playing DVD or CD and USB inserted, "Press USB to select device" appear at the top left corner for a moment.
- USB MENU screen appears on the TV screen and the saved file is played.

Skip Forward/Back

During playback, press the (◀◀/▶▶) button.

- When there is more than one file, when you press the ▶▶ button, the next file is selected.
- When there is more than one file, when you press the ◀◀ button, the previous file is selected.

Safe USB Removal

To prevent damage to the memory stored in the USB device, perform safe removal before disconnecting the USB cable.

- Press the STOP (■) button
- Remove the USB cable.

Fast playback

To play back the disc at a faster speed, press (◀◀/▶▶) during playback.

- Each time you press either button, the playback speed will change as follows:
2x → 4x → 8x.

Compatible Devices

1. USB devices that support USB Mass Storage v1.0. (USB devices that operate as a removable disk in Windows (2000 or later) without additional driver installation.)
2. MP3 Player: Flash type MP3 player.
3. Digital camera: Cameras that support USB Mass Storage v1.0.
 - Cameras that operate as a removable disk in Windows (2000 or later) without additional driver installation.
4. USB Flash Drive: Devices that support USB2.0 or USB1.1.
 - You may experience a difference in playback quality when you connect a USB1.1 device.
5. USB card Reader: One slot USB card reader and Multi slot USB card reader
 - Depending on the manufacturer, the USB card reader may not be supported.
 - If you install multiple memory devices into a multi card reader, you may experience problems.
6. If you use a USB extension cable, the USB device might not be recognized.
- CBI (Control/Bulk/Interrupt) is not supported.
- Digital Cameras that use PTP protocol or require additional program installation when connected to a PC are not supported.

- A device using NTFS file system is not supported. (Only FAT 16/32 (File Allocation Table 16/32) file system is supported.)
- Some USB and MP3 players, when connected to this product, may not operate depending on the sector size of their file system.
- The USB HOST function is not supported if a product that transfers media files by its manufacturer-specific program is connected.
- Does not operate with Janus enabled MTP (Media Transfer Protocol) devices.
- The USB host function of this product does not support all USB devices.

CD Ripping (Only DVD-C450K,C450,C360)

This feature lets you to copy audio files from disc to USB device into MP3 format.

1. Open the discs tray. Place the Audio CD(CD DA) disc on the tray, and close the tray. Connect the USB device to the USB port on the front of the unit. This screen will be displayed. Press ENTER to select disc.
2. Press the RETURN button to display the ripping screen.
3. Press the ▲/▼ buttons, then press the ENTER button to select files for ripping.
 - To deselect files, press ENTER button again.
4. Press the ► and ▼ button to select START, then press the ENTER button begin ripping. The Ripping menu contain the following buttons :
 - Mode (fast/normal)
 - Bit Rate, press **ENTER** to change 128kbps → 192kbps → 256kbps → 320kbps. Standart : 128kbps. Better Quality : 320kbps.
 - Device selection, press **ENTER** to change between deviced (max 4).
 - Select - Unselect, Press **ENTER** to change from Select all or Select none.

Note

- To return to CDDA screen, press the RETURN button again.
- When the CD ripping is in process the player will automatically begin playing.
- Only Audio CD (CD DA) discs can be ripped.
- Because the speed is 2.6x of normal speed. User is unable to play the CD DA through the rip ping process.

Picture CD Playback

1. Select the desired folder.
2. Press the ▲/▼ buttons to select a Picture file in the clips menu and then press the **ENTER** button.

Note

- Press the STOP button to return to the clips menu.
- When playing a Kodak Picture CD, the unit displays the Photo directly, not the clips menu.

Rotation

- Each time the ◀/▶ button is pressed, the picture rotates 90 degrees clockwise.
- Each time the ▲ button is pressed, the picture rotates 180 degrees.
- Each time the ▼ button is pressed, the picture changes to the mirror appearance.

Zoom

- Each time the ENTER Button is pressed repeatedly, the picture is enlarged. zoom mode : 100%, 125%, 150%, 200%.

Slide show

- When you press the ENTER/PLAY at JPEG file, it will go to full screen mode and automatically slide show.

Note

- Depending on a file size, the amount of time between each picture may be different from the manual.
- If you don't press any button, the slide show will start automatically in about 10 seconds by default.

CD-R JPEG Disc

- Only files with the ".jpg" and ".JPG" extensions can be played.
- If the disc has not been closed during the recording phase, (ie has not been finalised) it will take longer to start playing and not all of the recorded files may be played.
- Only CD-R discs with JPEG files in ISO 9660 or Joliet format can be played.
- The name of the JPEG file may not be longer than 8 characters and should contain no blank spaces or special characters (. / = +).
- Only a consecutively written multi-session disc can be played. If there is a blank segment in the multi-session disc, the disc can be played only up to the blank segment.
- A maximum of 500 images can be stored on a single CD.
- Kodak Picture CDs are recommended.
- When playing a Kodak Picture CD, only the JPEG files in the pictures folder can be played.
- Kodak Picture CD: The JPEG files in the pictures folder can be played automatically.
- Konica Picture CD: If you want to see the Picture, select the JPEG files in the clips menu.
- Fuji Picture CD: If you want to see the Picture, select the JPEG files in the clips menu.
- QSS Picture CD: The unit may not play QSS Picture CD.
- If the number of files in 1 Disc is over 500, only 500 JPEG files can be played.
- If the number of folders in 1 Disc is over 500, only JPEG files in 500 folders can be played.

karaoke functions

Karaoke Functions

Operation Sequence (Only DVD-C450K, C350K)

1. Connect the Mixed Audio Out terminals with the TV or Amplifier.
2. Connect Mic into Mic jack. When a MIC is connected, the karaoke functions can be used.

Mic Volume and Key Control

1. Playback the Karaoke Disc containing the wanted songs.
 - Press the **KARAOKE** button to select **Mic Volume** then press **KARAOKE** button again to select **keycon**.
2. Press the ◀/▶ buttons to change the desired tone.

Note

- If you hear feedback (squealing or howling) while using the karaoke feature, move the microphone away from the speakers or turn down the microphone volume or the speaker volume.
- When playing MP3, WMA, DTS and LPCM disc, the karaoke functions will not operate.
- When the MIC is connected, Digital Out does not work.
- The MIC sound outputs only from Analog Audio Out.

Changing setup menu

Using the Setup Menu

The Setup menu lets you customize your DVD player by allowing you to select various language preferences, set up a parental level, even adjust the player to the type of television screen you have.

1. With the unit in stop mode, press the MENU button on the remote control. Use the ◀/▶ buttons to select Setup, then press the ▼ or ENTER button.
2. Press the ▲/▼ buttons to select a menu option. Press the ▶ or ENTER to bring up the sub-menu.
3. To make the setup screen disappear after setting up, press the MENU button again.

Note

Depending on the disc, some Setup Menu selections may not work.

Setting Up the Language Features

If you set the player menu, disc menu, audio and subtitle language in advance, they will come up automatically every time you watch a movie.

Using the Player Menu Language

1. With the unit in stop mode, Press the MENU button.
2. Press the ◀/▶ buttons to select **Language Setup Page**, then press the ▼ or ENTER button.
3. Press the ▲/▼ buttons to select the desired language, then press the ENTER button.

Note

- The language is selected and the screen returns to Language Setup menu.
- To make the setup menu disappear, press the MENU button.
- If the selected language is not recorded on the disc, the original pre-recorded language is selected.
- Select "Original" if you want the default soundtrack language to be the original language the disc is recorded in.
- Select "Automatic" if you want the subtitle language to be the same as the language selected as the audio language.
- Some discs may not contain the language you select : in that case the disc will use its original language setting.

Setting Up the Audio Options

Audio Options allows you to setup the audio device and sound status settings depending on the audio system in use.

1. With the unit in stop mode, press the MENU button.
2. Press the ◀/▶ buttons to select **Audio Setup page**, then press the ▼ or ENTER button.
3. Press the ▲/▼ buttons to select the desired item, then press the ▶ or ENTER button.

Note :

- Even when PCM Down sampling is Off Some discs will only output down sampled audio through the digital outputs.
- There is no analog audio output when you play a DTS sound disc.

Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories. "DTS" and "DTS Digital Out" are trademarks of Digital Theater Systems, Inc.

Setting Up the Display Options

Display options enable you to set various video functions of the player.

1. With the unit in Stop mode, press the MENU button.
2. Press the ◀/▶ buttons to select **Display Setup Page**, then press the ▼ or ENTER button.
3. Press the ▲/▼ buttons to select the desired item, then press the ▶ or ENTER button.

- Consult your TV User's Manual to find out if your TV supports Progressive Scan. If Progressive Scan is supported, follow the TV User's Manual regarding Progressive Scan settings in the TV's menu system.
- If Video Output is set incorrectly, the screen may be blocked.
- When the resolution is changed during playback, it may take a few seconds for a normal image to appear.

Setting Up the Parental Control

The Parental Control function works in conjunction with DVDs that have been assigned a rating, which helps you control the types of DVDs that your family watches. There are up to 8 rating levels on a disc.

Setting Up the Rating Level / Changing the Password

1. With the unit in Stop mode, press the **MENU** button.
2. Press the ◀/▶ buttons to select **Parental Page**, then press the ▼ or **ENTER** button.
3. Press the ▲/▼ buttons to select **Parental/Password**, then press the ▶ or **ENTER** button.
4. Press the ▲/▼ buttons to select **Rating Level** you want, then press the **ENTER** button.
e.g) Setting up in KID SAFE.
5. Enter your password, If this is the first time, enter 0000. Then, enter a new password. The new pass-word must be a number other than 0000 to activate the parental control function, then re-enter the new password.

Note

- ① KID SAFE.
 - ② G (General Audiences) : All Ages Admitted.
 - ③ PG (Parental Guidance suggested) : Some material may not be suitable for young children.
 - ④ PG 13 (PG-13 Parents strongly cautioned) : Some material may be in appropriate for children under 13.
 - ⑤ PGR (Parental Guide Recommended) : These are not necessarily unsuitable for children, but viewer discretion is advised, and parents and guardians are encouraged to supervise younger viewer.
 - ⑥ R (Restricted) : Under 17 requires accompanying adult.
 - ⑦ NC17 (NC-17) : No one 17 and under admitted.
 - ⑧ ADULT.
- If you have forgotten your password, see "Forgot Password" in the Troubleshooting Guide.

Setting Up the DivX

1. With the unit in Stop mode, press the **MENU** button.
2. Press the ◀/▶ buttons to select **DivX Page**, then press the ▼ or **ENTER** button.
3. Press the ▲/▼ buttons to select the desired item, then press the ▶ or **ENTER** button.

Note :

- Press Ok will make the registration code window disappear.
- DivX can only be accessed at stop mode.

Reference

Troubleshooting

Before requesting service (troubleshooting), please check the following.

Problem	Action
The screen is blocked	• Press the ■ / ▲ button (in front panel) for more than 5 seconds under no disc inside. All settings will revert to the factory settings.
Forgot password.	• Press the ■ / ▲ button (in front panel) for more than 5 seconds under no disc inside. All settings including the password will revert to the factory settings. Don't use this unless absolutely necessary.

Specifications

General	Power Requirements	AC 110-240 V ~ 50/60 Hz
	Weight	DVD-C450K, C450 : 1.5 Kg DVD-C360, C350K, C350 : 1.2 Kg
	Power Consumption	6W
	Dimensions	DVD-C450K, C450 : 430mm (W) X 207 mm (D) X 42 mm (H) DVD-C360, C350K, C350 : 360mm (W) X 207 mm(D) X 42 mm (H)
	Operating Temperature Range	+5°C to +35°C
	Operating Humidity Range	10 % to 75 %
Video Output	Component Video	Y : 1.0 Vp-p (75 Ω load) Pr : 0.70 Vp-p (75 Ω load) Pb : 0.70 Vp-p (75 Ω load)
Audio Output	Frequency Response	20Hz ~ 20kHz

Memo

Memo

Memo

Contact SAMSUNG WORLD WIDE

If you have any questions or comments relating to Samsung products, please contact the SAMSUNG customer care center.

Region	Area	Contact Center ☎	Web Site
North America	Canada	1-800-SAMSUNG (726-7864)	www.samsung.com/ca
	Mexico	01-800-SAMSUNG (726-7864)	www.samsung.com/mx
	U.S.A	1-800-SAMSUNG (726-7864)	www.samsung.com/us
	Argentina	0800-333-3733	www.samsung.com/ar
	Brazil	0800-124-421, 4004-0000	www.samsung.com/br
Latin America	Chile	800-SAMSUNG (726-7864)	www.samsung.com/cl
	Nicaragua	00-1800-5077267	www.samsung.com/latin
	Honduras	800-7919267	www.samsung.com/latin
	Costa Rica	0-800-507-7267	www.samsung.com/latin
	Ecuador	1-800-10-7267	www.samsung.com/latin
	El Salvador	800-6225	www.samsung.com/latin
	Guatemala	1-800-239-0013	www.samsung.com/latin
	Jamaica	1-800-234-7267	www.samsung.com/latin
	Panama	800-7267	www.samsung.com/latin
	Puerto Rico	1-800-682-3180	www.samsung.com/latin
	Rep. Dominica	1-800-751-2676	www.samsung.com/latin
Europe	Trinidad & Tobago	1-800-SAMSUNG (726-7864)	www.samsung.com/latin
	Venezuela	0-800-100-5303	www.samsung.com/latin
	Colombia	01-8000112112	www.samsung.com.co
	Belgium	02 201 2418	www.samsung.com/be (Dutch)
	Czech Republic	800-SAMSUNG (800-726786)	www.samsung.com/be, fr (French)
	Denmark	8-SAMSUNG (7267864)	www.samsung.com/cz
	Finland	30-6227 515	www.samsung.com/dk
	France	01 4863 0000	www.samsung.com/fr
	Germany	01805-SAMSUNG (726-7864 € 0,14/Min)	www.samsung.de
	Hungary	06-80-SAMSUNG (726-7864)	www.samsung.com/hu
	Italy	800-SAMSUNG (726-7864)	www.samsung.com/it
	Luxemburg	02 261 03 710	www.samsung.com/lu
	Netherlands	0900-SAMSUNG (0900-7267864) (€ 0,10/Min)	www.samsung.com/nl
	Norway	3-SAMSUNG (7267864)	www.samsung.com/no
	Poland	0 801 1SAMSUNG (172678, 022-607-93-33)	www.samsung.com/pl
	Portugal	80820-SAMSUNG (726-7864)	www.samsung.com/pt
	Slovakia	0800-SAMSUNG (726-7864)	www.samsung.com/sk
	Spain	902-1-SAMSUNG (902 172 678)	www.samsung.com/es
	Sweden	0771 726 7864 (SAMSUNG)	www.samsung.com/se
	U.K	0845 SAMSUNG (7267864)	www.samsung.com/uk
	Eire	0818 717 100	www.samsung.com/ie
	Austria	0810-SAMSUNG (7267864, € 0,07/min)	www.samsung.com/at
	Switzerland	0848-SAMSUNG (7267864, CHF 0.08/min)	www.samsung.com/ch
CIS	Russia	8-800-555-55-55	www.samsung.com/r/ (French)
	Kazakhstan	8-10-800-500-55-500	www.samsung.ru
	Uzbekistan	8-10-800-500-55-500	www.samsung.com/kz, ru
	Kyrgyzstan	00-800-500-55-500	www.samsung.com/kz, ru
	Tadikistan	8-10-800-500-55-500	www.samsung.com/kz, ru
	Ukraine	8-800-502-0000	www.samsung.ua
	Belarus	810-800-500-55-500	www.samsung.com/ua, ru
	Moldova	00-800-500-55-500	
	Lithuania	8-800-77777	www.samsung.com/lt
	Latvia	8000-7267	www.samsung.com/lv
	Estonia	800-7267	www.samsung.com/ee
Asia Pacific	Australia	1300 362 603	www.samsung.com/au
	New Zealand	0800-SAMSUNG (0800 726 786)	www.samsung.com/nz
	China	400-610-5858, 010-6475 1880	www.samsung.com/cn
	Hong Kong	3698-4698	www.samsung.com/hk
	India	3030 8282, 1800 110011, 1800 3000 8282	www.samsung.com/hk, en/
	Indonesia	0800-112-8888	www.samsung.com/in
	Japan	0120-327-527	www.samsung.com/jd
	Malaysia	1800-88-9999	www.samsung.com/jp
	Philippines	1-800-10-SAMSUNG (726-7864), 1-800-3-SAMSUNG (726-7864), 1-800-8-SAMSUNG (726-7864), 02-5805777	www.samsung.com/my
	Singapore	1800-SAMSUNG (726-7864)	www.samsung.com/ph
	Thailand	1800-29-3232, 02-689-3232	www.samsung.com/sg
	Taiwan	0800-329-999	www.samsung.com/th
Middle East & Africa	Vietnam	1 800 588 889	www.samsung.com/tw
	Turkey	444 17 11 11	www.samsung.com/vn
	South Africa	0880-SAMSUNG (726-7864)	www.samsung.com/tr
	U.A.E	800-SAMSUNG (726-7864), 8000-4726	www.samsung.com/za
			www.samsung.com/ae